

<b>Product Name</b>	<b>8909</b>
<b>Number of Pages</b>	<b>134</b>
<b>Produce Version</b>	<b>8909_AT_Command_Manual_V1.06</b>
<b>Date</b>	<b>2016-10-25</b>

# 8909

# AT Command Manual

---

V1.06



Shang Hai YUGE Information Technology co., LTD

All rights reserved

---



## Update records

version	Date	Author	Description
V1.01	2016/02/24	zhangfangfang	Initial
V1.02	2016/03/29	zhangfangfang	1.The command AT+SYSINFO add the parameter <reg_mode> 2.Modified defined values of the command AT+CCSQ 3.Add the NOTE for the command AT+CCFC 4.Add the command AT\$CRMCALL
V1.03	2016/05/06	zhangfangfang	1.Modified the example of the command AT^MEID 2.Deleted all commands about CDMA special commands. 3.Modified the commands AT+CGMI/AT+CGMM/AT+CGMR 4.Add the command AT+CONN
V1.04	2016/06/27	Zhangfangfang	1.Add the command AT+RMNETCFG 2.Add GPS related commands 3.Add CDMA special short message commands 4.Add the command AT+PSRAT
V1.05	2016/09/02	Zhangfangfang	1.Add the command AT+SETVOLTE
V1.06	2016/10/25	zhangfangfang	1.Add the command AT^NETCFG 2.Add the command AT^NVAUTH 3.Add the command AT+CLVL



## Contents

Chapter 1. Summary.....	7
1.1 AT Command Syntax.....	7
1.2 AT Command Interface.....	7
1.3 AT Command Interface Standards.....	8
Chapter 2. Terms and Abbreviations.....	10
Chapter 3. General Commands.....	11
3.1 ATE Set Command Echo Mode.....	11
3.2 ATV Set Result Code Format Mode.....	11
3.3 ATI Display Product Identification Information.....	12
3.4 AT+CGMI Request Manufacturer Identification.....	13
3.5 AT+CGMM Request Model Identification.....	14
3.6 AT+CGMR Request Revision Identification.....	15
3.7 AT+CIMI Request International Mobile Subscriber Identity.....	15
3.8 AT^IMEI Set module IMEI.....	16
3.9 AT+CGSN Request Product Serial Number Identification.....	17
3.10 AT+CCLK Real Time Clock.....	17
3.11 AT+CSCS Select TE Character Set.....	18
3.12 AT+GCAP Request Overall Capabilities.....	19
3.13 AT+IPR Set Local Baud Rate Temporarily.....	20
3.14 AT+IFC Set Local Data Flow Control.....	21
3.15 AT+ICF Set Control Character Framing.....	22
3.16 AT+CSQ Signal Quality Report.....	23
3.17 AT+CFUN Set Phone Functionality.....	24
3.18 AT+ICCID Read ICCID in SIM Card.....	25
3.19 AT+CPAS Mobile Equipment Activity Status.....	26
Chapter 4. Call Related Commands.....	27
4.1 ATD Dial Command.....	27
4.2 ATA Call Answer.....	27
4.3 ATH Disconnect Existing Call.....	28
4.4 AT+CHUP Hang Up Call.....	29
4.5 AT+CLCC List Current Calls.....	29
4.6 AT+CLVL Loudspeaker volume level.....	31
4.7 RING Incoming Call Bell.....	32



4.8 ^ORIG	Outgoing Call Bell.....	32
4.9 ^CONN	Call Answering Indication.....	33
4.10 ^CEND	Call End Indication.....	33
4.11 AT+CBST	Select Bearer Service Type.....	34
4.12 AT+CR	Service Reporting Control.....	36
4.13 AT+CRC	Cellular Result Codes.....	37
4.14 AT+CVHU	Voice Hang Up Control.....	38
4.15 ATSO	Automatic Answer.....	39
4.16 AT^NVAUTO	Automatic Answer.....	39
4.17 AT^DTMF	Dual Tone Multi-Frequency.....	40
4.18 AT+SETVOLTE	Set VOLTE.....	41
Chapter 5. Short Message Related Commands.....		43
5.1 AT+CSMS	Select Message Service.....	43
5.2 AT+CPMS	Preferred Message Storage.....	44
5.3 AT+CMGF	Select Short Message Format.....	45
5.4 AT+CSCA	SMS Service Centre Address.....	46
5.5 AT+CNMI	New Message Indications to TE.....	47
5.6 AT+CMGW	Write Message to Memory.....	49
5.7 AT+CMSS	Send Message From Storage.....	51
5.8 AT+CMGS	Send Message.....	52
5.9 AT+CMGL	List Messages.....	53
5.10 AT+CMGR	Read Message.....	55
5.11 AT+CMGD	Delete Message.....	57
Chapter 6. Supplementary Service Commands.....		58
6.1 AT+CLIP	Calling Line Identification Presentation.....	58
6.2 AT+CCFC	Call Forwarding Number and Conditions Control.....	59
6.3 AT+CCWA	Call Waiting Control.....	61
6.4 AT+CHLD	Call Related Supplementary Services.....	62
6.5 AT+CUSD	Unstructured Supplementary Service Data.....	64
Chapter 7. SIM Card Related Commands.....		66
7.1 AT+CLCK	Facility Lock.....	66
7.2 AT+CPWD	Change Password.....	67
7.3 AT+CPIN	Enter PIN.....	69
7.4 AT+CRSM	Restricted SIM Access.....	70



7.5 AT+CIND	Indicator Control.....	71
7.6 AT+CMER	Mobile Termination Event Reporting.....	72
Chapter 8. Packet Domain Commands.....		74
8.1 AT+CGDCONT	Define PDP Context.....	74
8.2 AT+CGATT	PS Attach or Detach.....	75
8.3 AT+CGACT	PDP Context Activate or Deactivate.....	76
8.4 ATD*99#	Initiate Data Connection.....	77
8.5 AT^DATAMODE	PPP Dial-Up Status.....	77
8.6 AT^DATADOWN	Disconnect Current PPP Dial.....	78
8.7 AT\$QCPDPP	Authentication.....	79
8.8 AT+RMNETCFG	GobiNet Mode.....	80
8.9 AT^NVAUTH	Select the location of the user name and password to read.....	80
8.10 AT^NETCFG	NDIS interface settings.....	81
8.11 AT\$QCRMCall	GobiNet dial-up connection.....	82
8.12 AT+CONN	RNDIS dial-up connection.....	83
Chapter 9. Phonebook Related Commands.....		85
9.1 AT+CNUM	Subscriber Number.....	85
9.2 AT+CPBS	Select Phonebook Memory Storage.....	85
9.3 AT+CPBR	Read Phonebook Entries.....	86
9.4 AT+CPBW	Write Phonebook Entry.....	87
Chapter 10. Network Service Commands.....		89
10.1 AT+COPS	Operator Selection.....	89
10.2 AT+CREG	Network Registration.....	90
10.3 AT+CGREG	GPRS Network Registration Status.....	91
10.4 AT^SYSINFO	Query System Information.....	92
10.5 AT^SYSCONFIG	Set System Parameter.....	94
10.6 AT^MODECONFIG	Network Mode Selection.....	95
10.7 AT^SYSORDER	Configure Search Network Order.....	96
10.8 AT+CEMODE	EPS Registry Settings.....	97
10.9 AT+CPOL	Preferred Operator List.....	98
10.10 AT+QNWINFO	Query Network Information.....	99
10.11 AT+PSRAT	Current network information.....	101
Chapter 11. CDMA Dedicated AT Command.....		103
11.1 AT+QCIMI	Request International Mobile Subscriber Identity.....	103



11.2 AT^MEID Query MEID.....	103
11.3 AT+CCSQ Signal Quality Report.....	104
11.4 AT^HDRCSQ Signal Quality Under HDR Mode.....	105
Chapter 12. CDMA Dedicated Call Related AT Command.....	106
12.1 AT+CDV Dial Command.....	106
12.2 AT^CLIP Calling Line Identification Presentation.....	106
12.3 ^LINKED Call Answering Indication.....	108
12.4 AT^CDTMF Dual Tone Multi-Frequency.....	108
12.5 +CCWA Call Waiting.....	109
12.6 AT+QCHLD Call Related Supplementary Services.....	110
Chapter 13. CDMA dedicated Packet Domain Commands.....	111
13.1 ATD#777 Initiate Data Connection.....	111
13.2 AT^GPSPASSWORD Set User Name and Password.....	111
Chapter 14. GPS.....	113
14.1 AT+CGSPSPORT Set GPS information output port.....	113
14.2 AT+CGPS Start or stop GPS.....	113
14.3 AT+CGPSHIDE Open or Close the GPS information report.....	114
14.4 AT+CGPSINFO Get GPS information.....	115
14.5 NMEA message specification.....	116
14.5.1 GPGGA GPS Fixed Data.....	116
14.5.2 GPGSA GNSS DOP and Active Satellites.....	117
14.5.3 GPGSV GNSS Satellites in View.....	119
14.5.4 GPRMC Recommended Minimum Specific GNSS Data.....	120
14.5.5 GPVTG Course Over Ground and Ground Speed.....	121
Chapter 15. CDMA dedicated short message related commands.....	123
15.1 AT\$QCPMS(AT+CPMS) Preferred message storage.....	123
15.2 AT\$QCMGF(AT+CMGF) Select Short Message Format.....	124
15.3 AT\$QCNMI(AT+CNMI) New Message Indications to TE.....	124
15.4 AT\$QCMGW(AT+CMGW) Write Message to Memory.....	126
15.5 AT\$QCMSS(AT+CMSS) Send Message From Storage.....	127
15.6 AT\$QCMGS(AT+CMGS) Send Message.....	129
15.7 AT\$QCMGL(AT+CMGL) List Messages.....	130
15.8 AT\$QCMGR(AT+CMGR) Read Message.....	132
15.9 AT\$QCMGD(AT+CMGD) Delete Message.....	133



## Chapter 1. Summary

AT command interface, as shown in Figure 1-1:

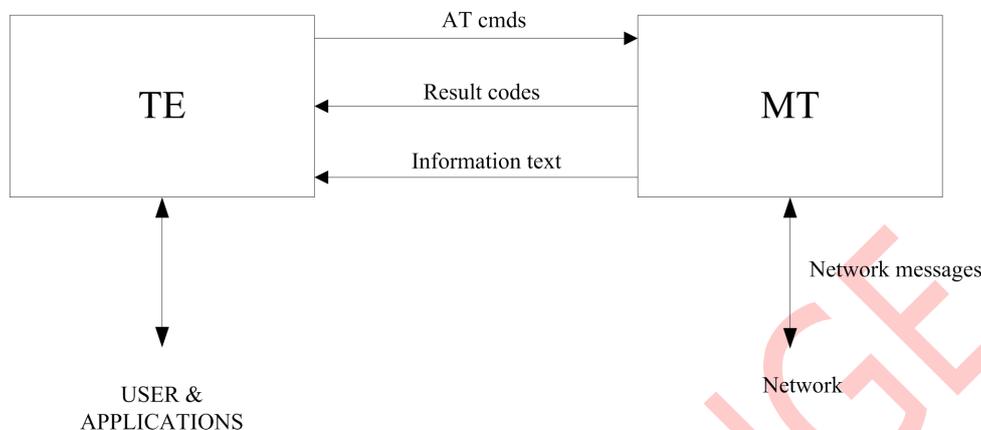


Figure 1-1 AT command interface

### 1.1 AT Command Syntax

1. Optional parameter and required parameters must be arranged in accordance with the provisions of the order, the parameters must be separated by a comma. An example of this "AT+CPWD=<fac>,<oldpwd>,<newpwd>" ,which is used to set a new password for facility lock.

2. If the parameter is a string (such as <number>), the string must be placed in double quotes. For example, the string "1234" or "cmnet". On the contrary, the symbols in double quotes can be seen as a string.

3. Optional parameters or the optional part of the results return from TA should be in the square brackets.

4. When you don't use double quotes, the spaces between the characters in the string are negligible.

5. In actual use, do not need to enter <>, [].

6. All AT commands are not case sensitive, "AT" or "at" is OK.

### 1.2 AT Command Interface

Each interface requires functional cohesion.

Because of the AT command transmit the data packets through communication port, so the size of the package is limited. For sending AT commands, in addition to the characters "AT", MT can receiving 1600 characters in length at most, including the null character at the



end of the commands . MT active reported response messages or URC , the maximum length is also limited to 1600 characters .

Each command line can contain only one AT command . For the URC or response which MT initiative report to TE,Each line also allows only one AT command.AT command end with a carriage return,and response and reporting end with linefeed.

In order to increase the readability and normative of the command and response format,In addition to the original standard protocol interface,all the other new interface parameters cannot contain spaces.

If TE want to execute the second AT command ,it must be first wait for the response of the AT command from MT. Or the second AT command will not be executed.

In order to ensure the other affairs without interference, it suggest that report response results in asynchronous mode for the AT command which need long time to response.If MT takes a long time to respond to the TE, there may be a result of the response is interrupted by a URC.This interrupt contains two cases,one is that the URC report during the response process after the AT command executed,the response result will be report after the URC report. Another is that the URC report during the response process after the AT command executed , the AT command still to be executed and the response will be report with the URC report lead to two kinds of reports confusion.For the special URC such as RING will use as a command terminator in some special cases, for example, the hang up command will be aborted if it has RING report in the process of hang up command .

The definition of string: up by double quotes, without quotes or comma byte stream.

AT command string con not appear the combination of comma and quotes.The current version, does not support the escape character.For the UCS2 encoding format of the data, the encoding value reported in character format.

The possible response from MT to TE consist of information text and result code,of which the information text is optional and the result code is Compulsory.Possible response format control by ATV command.

## 1.3 AT Command Interface Standards

### 1. The standard of add new interface

Parameters can added directly behind the original parameters of AT command , so in the late stage of product development if it is found that the interface can not adapt to the new demand , it is only allowed add new parameters behind the original interface . Additional parameters should not affect the original function.



2. The design principle of this product does not support function

If the AT command from MT can not recognize the current interface, the result of command not support will be reported. If the parameters more than the original parameters, two report may be reported, the one is result code of too many parameters, another approach is fault-tolerant processing which not to judge the extra parameter.

Shanghai YUGE



## Chapter 2. Terms and Abbreviations

Abbreviations	Full name
AAA	Authentication Authorization Accounting
WCDMA	Wide band Code Division Multiple Access
ESN	Electronic Serial Number
FTP	File Transfer Protocol
GIS	Geographic Information System
GPS	Global Positioning System
IMSI	International Mobile Subscriber Identity
MDN	Mobile Directory Number
PDSN	Packet Data Serving Node
PPP	Point to Point Protocol
SGIP	Short Message Gateway Interface Protocol
SI	System Integrate
SMG	Short Message Gateway
SMPP	Short Message Peer to Peer
TCP	Transmission Control Protocol
UDP	User Data gram Protocol
SIM	User Identity Model
EDGE	Enhanced Data GSM Environment
EGPRS	Enhanced General Packet Radio Service
GPRS	General Packet Radio Service
GSM	Global System for Mobile communications
HSDPA	High Speed Downlink Packet Access
HSUPA	High Speed Uplink Packet Access
PDU	Protocol Data Unit



## Chapter 3. General Commands

### 3.1 ATE Set Command Echo Mode

#### Description

The command controls if the module echoes characters received from TE during AT command state. Attention: dial-up network or the automatic processing software will automatically send the ATE0 to close the echoes.

#### Syntax

Command	Response
ATE[<value>]	OK or ERROR

#### Defined values

Parameter	values	Explain
<value>	0	Echo mode off
	1	Echo mode on

#### NOTE

The default value of <value> is 1

#### Examples

ATE

OK

### 3.2 ATV Set Result Code Format Mode

#### Description

This parameter setting determines the contents of the header and trailer transmitted with result codes and information responses.

In case of using the command without parameter <value> will be set to 0.

#### Syntax

Command	Response
ATV[<value>]	0 If<value>=0 or OK If<value>=1



### Defined value

Parameter	values	Explain
<value>	0	Information response: <text><CR><LF> Short result code format: <numeric code><CR>
	1	Information response: <CR><LF><text><CR><LF> Long result code format: <CR><LF><verbose code><CR><LF>

### Example

```
ATV00
```

```
ATV1
```

```
OK
```

## 3.3 ATI Display Product Identification Information

### Description

The command requests the product information, which consists of manufacturer identification, model identification, revision identification, International Mobile station Equipment Identity (IMEI) and overall capabilities of the product.

### Syntax

Command	Response
ATI	Manufacturer: <manufacturer> Model: <model> Revision: <revision> IMEI: <sn> +GCAP: list of <name>s  OK

### Defined values

Parameter	values	Explain
<manufacturer>		The identification of manufacturer.
<model>		The identification of model.
<revision>		The revision identification of firmware.
<sn>		Serial number identification, which consists of a single line containing IMEI



		(International Mobile station Equipment Identity) number.
<name>	+CGSM	GSM function is supported
	+FCLASS	FAX function is supported
	+DS	Data compression is supported
	+ES	Synchronous data mode is supported.

### Examples

#### ATI

Manufacturer: YUGE

Model: CLM920

Revision: CLM920-v1 [Dec 29 2015 03:49:34]

IMEI: 357941053041368

+GCAP: +CGSM,+DS,+ES

OK

## 3.4 AT+CGMI Request Manufacturer Identification

### Description

Execution command returns a manufacturer identification text.

### Syntax

Command	Response
AT+CGMI	<manufacturer> OK
AT+CGMI=<manufacturer>	OK
AT+CGMI=?	OK

### Defined values

Parameter	values	Explain
<manufacturer>		The identification of manufacturer.

### Examples

#### AT+CGMI

Yuga Co.,Ltd.

OK



AT+CGMI=YUGE

OK

AT+CGMI

YUGE

OK

AT+CGMI=?

OK

### 3.5 AT+CGMM Request Model Identification

#### Description

Execution command returns a product model identification text.

#### Syntax

Command	Response
AT+CGMM	<name> OK
AT+CGMM=<name>	OK
AT+CGMM=?	OK

#### Defined values

Parameter	values	Explain
<name>		The identification of model.

#### Examples

AT+CGMM

CLM800

OK

AT+CGMM=8909

OK

AT+CGMM=?

OK



### 3.6 AT+CGMR Request Revision Identification

#### Description

Execution command delivers a product firmware version identification.

#### Syntax

Command	Response
AT+CGMR	<software version> OK
AT+CGMR=<software version>	OK
AT+CGMR=?	OK

#### Defined values

Parameter	values	Explain
<software version>		The revision identification of firmware.

#### Examples

```
AT+CGMR=CLM800-v1 [May 5 2016 20:20:19]
```

```
OK
```

```
AT+CGMR=?
```

```
OK
```

```
AT+CGMR
```

```
CLM800-v1 [May 5 2016 20:20:19]
```

```
OK
```

### 3.7 AT+CIMI Request International Mobile Subscriber Identity

#### Description

Execution command requests the International Mobile Subscriber Identity (IMSI) which is intended to permit the TE to identify the individual SIM card or active application in the UICC (GSM or USIM) that is attached to MT.

#### Syntax

Command	Response
AT+CIMI	<IMSI> OK



AT+CIMI=?	OK
-----------	----

#### Defined values

Parameter	values	Explain
<IMSI>		International Mobile Subscriber Identity (string, without double quotes).

#### Examples

AT+CIMI

460016261510461

OK

### 3.8 AT^IMEI Set module IMEI

#### Description

The command is used to set module IMEI value.

#### Syntax

Command	Response
AT^IMEI=?	OK
AT^IMEI?	^IMEI: <IMEI> OK
AT^IMEI=<IMEI>	OK

#### Defined values

Parameter	values	Explain
<IMEI>		Serial number identification

#### Examples

AT^IMEI?

^IMEI: 123456789012345

OK

AT^IMEI=357941053041368

OK

AT^IMEI=?

OK



### 3.9 AT+CGSN Request Product Serial Number Identification

#### Description

Execution command returns International Mobile Equipment Identity (IMEI).

#### Syntax

Command	Response
AT+CGSN	<IMEI> OK
AT+CGSN=?	OK

#### Defined values

Parameter	values	Explain
<IMEI>		Serial number identification

#### Examples

AT+CGSN

357941053041368

OK

### 3.10 AT+CCLK Real Time Clock

#### Description

The command is used to manage Real Time Clock of the module.

#### Syntax

Command	Response
AT+CCLK=<time>	OK or ERROR
AT+CCLK?	+CCLK: <time> OK
AT+CCLK=?	OK

#### Defined value

Parameter	values	Explain
<time>		String type value; format is “yy/MM/dd,hh:mm:ss”, where characters indicate year (two last digits), month, day, hour, minutes, seconds and time zone (indicates the difference, expressed in quarters of an hour, between the



		local time and GMT; If the MT does not support the time zone, the last three characters of the <time> will not return
yy	1980-2100	Year
MM	01-12	Month
dd	01-31	Day
hh	01-24	Hour
mm	00-60	Minute
ss	00-60	Second

### Example

AT+CCLK?

+CCLK: "16/02/22,08:09:28"

OK

AT+CCLK="16/02/14,17:30:51"

OK

## 3.11 AT+CSCS Select TE Character Set

### Description

Write command informs TA which character set <chset> is used by the TE. TA is then able to convert character strings correctly between TE and MT character sets.

Read command shows current setting and test command displays conversion schemes implemented in the TA.

### Syntax

Command	Response
AT+CSCS=?	+CSCS: (list of supported <chset>s) OK
AT+CSCS?	+CSCS: <chset> OK
AT+CSCS=<chset>	OK or ERROR
AT+CSCS	OK



### Defined values

Parameter	values	Explain
<chset>	“IRA”	International reference alphabet.
	“GSM”	GSM default alphabet.
	“UCS2”	UCS2 alphabet

### Examples

```
AT+CSCS=?
```

```
+CSCS: ("IRA","GSM","UCS2")
```

```
OK
```

```
AT+CSCS="IRA"
```

```
OK
```

```
AT+CSCS?
```

```
+CSCS: "IRA"
```

```
OK
```

## 3.12 AT+GCAP Request Overall Capabilities

### Description

Execution command causes the TA reports a list of additional capabilities.

### Syntax

Command	Response
AT+GCAP	+GCAP:(list of <name>s) OK
AT+GCAP=?	OK

### Defined values

Parameter	values	Explain
<name>	+CGSM	GSM function is supported
	+FCLASS	FAX function is supported
	+DS	Data compression is supported
	+ES	Synchronous data mode is supported.

### Examples

```
AT+GCAP
```



```
+GCAP: +CGSM,+DS
```

```
OK
```

```
AT+GCAP=?
```

```
OK
```

### 3.13 AT+IPR Set Local Baud Rate Temporarily

#### Description

The command sets the baud rate of module's serial interface temporarily, after reboot the baud rate is set to default value. The default value is 115200.

#### Syntax

Command	Response
AT+IPR=<rate>	OK Or ERROR
AT+IPR?	+IPR: <rate>  OK
AT+IPR=?	+IPR(<rate>list)  OK

#### Defined values

Parameter	values	Explain
<rate>	300,600,1200,2400,4800,9600,19200,38400,57600,115200,230400,921600,2000000,290000,3000000,3200000,3686400,4000000	

#### Examples

```
AT+IPR?
```

```
+IPR: 115200
```

```
OK
```

```
AT+IPR=?
```

```
+IPR:(),(300,600,1200,2400,4800,9600,19200,38400,57600,115200,230400,921600,2000000,2900000,3000000,3200000,3686400,4000000)
```

```
OK
```



```
AT+IPR=115200
```

```
OK
```

### 3.14 AT+IFC Set Local Data Flow Control

#### Description

The command sets the flow control of the module.

#### Syntax

Command	Response
AT+IFC=<txfc>,<rxfc>	OK Or ERROR
AT+IFC?	+IFC: <txfc><rxfc>  OK
AT+IFC=?	+IFC: (<txfc>list),(<rxfc>list)  OK

#### Defined values

Parameter	values	Explain
<txfc>	0	none
	1	XON/XOFF
	2	RTS/CTS
<rxfc>	0	None
	1	XON/XOFF
	2	RTS/CTS

#### Examples

```
AT+IFC?
```

```
+IFC: 2,2
```

```
OK
```

```
AT+IFC=?
```

```
+IFC: (0-3),(0-2)
```

```
OK
```

```
AT+IFC=2,2
```

```
OK
```



### 3.15 AT+ICF Set Control Character Framing

#### Description

The command sets character framing which contain data bit, stop bit and parity bit.

#### Syntax

Command	Response
AT+ICF=<format>,<parity>	OK Or ERROR
AT+ICF?	+ICF:<format>,<parity>  OK
AT+ICF=?	+ICF:(<format>list),(<parity>list)  OK

#### Defined values

Parameter	values	Explain
< format >	3	data bit 8, check bit 0 , stop bit 1
< parity >	0	odd
	1	even
	3	none

#### Examples

AT+ICF?

+ICF: 3,3

OK

AT+ICF=?

+ICF: (3),(0-3)

OK

AT+ICF=3,3

OK



## 3.16 AT+CSQ Signal Quality Report

### Description

Execution command returns received signal strength indication <rss> and channel bit error rate <ber> from the ME. Test command returns values supported by the TA as compound values.

### Syntax

Command	Response
AT+CSQ	+CSQ:<rss>,<ber> OK
AT+CSQ=?	+CSQ:(<rss>list),(<ber>list) OK

### Defined values

Parameter	values	Explain
<rss> GSM/WCDMA/LTE	0	- 113 dBm or less
	1	- 111 dBm
	2-30	- 109... - 53 dBm
	31	-51 dBm
	99	not known or not detectable
<rss> TDD	100	-116dBm or less
	101	-115dBm
	102-190	-114dBm ~ -26dBm
	191	-25dBm or greater
	199	not known or not detectable
<ber>	0	<0.01%
	1	0.01% --- 0.1%
	2	0.1% --- 0.5%
	3	0.5% --- 1.0%
	4	1.0% --- 2.0%
	5	2.0% --- 4.0%
	6	4.0% --- 8.0%
	7	>=8.0%
	99	not known or not detectable



## Examples

AT+CSQ

+CSQ: 19,99

OK

AT+CSQ=?

+CSQ: (0-31,99),(0-7,99)

OK

## 3.17 AT+CFUN Set Phone Functionality

### Description

The command controls the functionality level. It can also be used to reset the UE.

### Syntax

Command	Response
AT+CFUN=[<fun>[,<rst>]]	OK
AT+CFUN?	+CFUN:<fun> OK
AT+CFUN=?	+CFUN:(<fun>list),(<rst>list) OK

### Defined values

Parameter	values	Explain
<fun>	0	Minimum functionality
	1	Full functionality, online mode
	4	Disable phone both transmit and receive RF circuits
	5	Factory Test Mode
	6	Reset
	7	Offline Mode
<rst>	0	Do not reset the ME before setting it to <fun> power level
	1	Reset the ME before setting it to <fun> power level. This value only takes effect when <fun> equals 1.

### Examples

AT+CFUN?



```
+CFUN: 1
```

```
OK
```

```
AT+CFUN=?
```

```
+CFUN: (0-1,4-7),(0-1)
```

```
OK
```

```
AT+CFUN=1,1
```

```
OK
```

### 3.18 AT+ICCID Read ICCID in SIM Card

#### Description

The command is used to Read the ICCID in SIM card

#### Syntax

Command	Response
AT+ICCID	+ICCID: <ICCID> OK
AT+ICCID=?	OK

#### Defined values

Parameter	values	Explain
<ICCID>		Integrate circuit card identity

#### Examples

```
AT+ICCID
```

```
ICCID: 89860115831004984192
```

```
OK
```

```
AT+ICCID=?
```

```
OK
```



### 3.19 AT+CPAS Mobile Equipment Activity Status

#### Description

Execution command returns the activity status <cpas> of the ME.

#### Syntax

Command	Response
AT+CPAS	+CPAS: <cpas> OK
AT+CPAS=?	+CPAS: (<cpas>list) OK

#### Defined values

Parameter	values	Explain
<cpas>	0	Ready (ME allows commands from TA/TE)
	3	Ringing
	4	Call in progress or call hold

#### Examples

AT+CPAS

+CPAS: 0

OK

AT+CPAS=?

+CPAS: (0,3,4)

OK



## Chapter 4. Call Related Commands

### 4.1 ATD Dial Command

#### Description

The dial command can be used to set up outgoing voice and data calls.

#### Syntax

Command	Response
ATD[ <i>digits</i> ][ <i>I/i</i> ][:]	OK

#### Defined values

Parameter	values	Explain
[ <i>digits</i> ]	0-9, *, #, +	Ready (ME allows commands from TA/TE)
[ <i>I/i</i> ]	I	Activates CLIR
	i	Deactivates CLIR
[:]		The termination character ";" is mandatory to set up voice calls.

#### Examples

```
ATD10010;
```

```
OK
```

```
^ORIG:0,0
```

```
^CONN:0,0
```

### 4.2 ATA Call Answer

#### Description

Connects the module to an incoming voice or data call indicated by a "RING" URC.

#### Syntax

Command	Response
ATA	OK

#### Examples

```
RING
```

```
RING
```

```
ATA
```



```
OK
```

```
^CONN:3,0
```

### 4.3 ATH Disconnect Existing Call

#### Description

The command is used to disconnect existing voice call. Before using ATH command to hang up a voice call, it must set AT+CVHU=0. Otherwise, ATH command will be ignored and “OK” response is given only.

#### Syntax

Command	Response
ATH	OK

#### Examples

```
ATD18521XXXXXX;
```

```
OK
```

```
^ORIG:1,0
```

```
^CONN:1,0
```

```
ATH
```

```
OK
```

```
AT+CVHU?
```

```
+CVHU: 1
```

```
OK
```

```
AT+CVHU=0
```

```
OK
```

```
ATH
```

```
OK
```

```
^CEND:1,19,29
```



## 4.4 AT+CHUP Hang Up Call

### Description

The command is used to cancel voice calls.

### Syntax

Command	Response
AT+CHUP	OK

### Examples

```
ATD18521XXXXXX;
```

```
OK
```

```
^ORIG:1,0
```

```
^CONN:1,0
```

```
AT+CHUP
```

```
OK
```

```
^CEND:1,25,29
```

## 4.5 AT+CLCC List Current Calls

### Description

Return list of current calls of ME. If command succeeds but no calls are available, no information response is sent to TE.

### Syntax

Command	Response
AT+CLCC	+CLCC:<idx>,<dir>,<stat>,<mode>,<mpty>[,<number>,<type>[,<alpha>[,<priority>]]]
	OK
AT+CLCC=?	OK

### Defined values

Parameter	values	Explain
<idx>		Integer type, call identification number, this number can be used in +CHLD command operations.
<dir>	0	Mobile originated (MO) call



	1	Mobile terminated (MT) call
<stat>	0	Active
	1	Held
	2	Dialing (MO call)
	3	Alerting (MO call)
	4	Incoming (MT call)
	5	Waiting (MT call)
	<mode>	0
1		Data
2		Fax
<mpty>	0	Call is not one of multiparty (conference) call parties
	1	Call is one of multiparty (conference) call parties
<number>		String type phone number in format specified by <type>.
<type>	129	Unknown type
	145	International number type
	161	National type
<alpha>		String type alphanumeric representation of <number> corresponding to the entry found in phonebook; used character set should be the one selected with command Select TE Character Set AT+CSCS.
<priority>		

### Example

```
ATD138XXXXXXXXX;
```

```
OK
```

```
^ORIG:2,0
```

```
AT+CLCC
```

```
+CLCC: 1,0,3,0,0,"138XXXXXXXXX",129
```

```
OK
```

```
^CONN:2,0
```



### AT+CLCC

```
+CLCC: 1,0,0,0,0,"138XXXXXXXXX",129
```

```
OK
```

```
AT+CHUP
```

```
OK
```

```
^CEND:2,5,29
```

## 4.6 AT+CLVL Loudspeaker volume level

### Description

The command is used to select the volume of the internal loudspeaker audio output of the device.

### Syntax

Command	Response
AT+CLVL=<level>	OK
AT+CLVL?	+CLVL: <level> OK
AT+CLVL=?	+CLVL: (0-7) OK

### Defined value

Parameter	values	Explain
<level>	0-7	Integer type value which represents loudspeaker volume level. The range is from 0 to 7, and 0 represents the lowest loudspeaker ,volume level, 3 is default factory value.

### Example

```
AT+CLVL?
```

```
+CLVL: 3
```

```
OK
```



```
AT+CLVL=4
```

```
OK
```

## 4.7 RING Incoming Call Bell

### Description

When the mobile terminal has called, the MT will be periodic (T=6s) to report this instruction to TE.

### Syntax

Command	Response
	RING

### Example

```
RING
```

```
RING
```

```
ATA
```

```
OK
```

```
^CONN:3,0
```

## 4.8 ^ORIG Outgoing Call Bell

### Description

MT is initiating a call.

### Syntax

Command	Response
	^ORIG:<call_id>,<call_type>

### Defined value

Parameter	values	Explain
<call_id>		Integer type, call identification number, this number can be used in +CHLD command operations.
<call_type>	0	Voice call
	9	Emergency call

### Example



```
ATD10010;
OK

^ORIG:4,0

^CONN:4,0
```

## 4.9 ^CONN Call Answering Indication

### Description

When the call is switched on, the MT reports to the TE to indicate that the current state has changed to a call state.

### Syntax

Command	Response
	^CONN:<call_id>,<call_type>

### Defined value

Parameter	values	Explain
<call_id>		Integer type, call identification number, this number can be used in +CHLD command operations.
<call_type>	0	Voice call
	9	Emergency call

### Example

```
ATD10010;
OK

^ORIG:4,0

^CONN:4,0
```

## 4.10 ^CEND Call End Indication

### Description

When the call is over, MT reports this instruction to the TE, informs the TE that the reason of call end and the call duration .

### Syntax



Command	Response
	^CEND:<call_id>,<duration>,<end_status>

#### Defined values

Parameter	values	Explain
<call_id>		Integer type, call identification number, this number can be used in +CHLD command operations.
<duration>		Call duration , in seconds
<end_status>		Call end reason

#### Example

```

ATD10010;
OK

^ORIG:4,0

^CONN:4,0

AT+CHUP
OK

^CEND:4,4,29

```

## 4.11 AT+CBST Select Bearer Service Type

### Description

Write command selects the bearer service <name> with data rate <speed>, and the connection element <ce> to be used when data calls are originated.

### Syntax

Command	Response
AT+CBST=[<speed>[,<name>[,<ce>]]]	OK
AT+CBST?	+CBST:<speed>,<name>,<ce>
AT+CBST=?	OK
AT+CBST=?	+CBST:(<speed>list),(<name>list),(<ce>list)



OK

**Defined values**

Parameter	values	Explain
<speed>	0	Autobauding (automatic selection of the speed; this setting is possible in case of 3.1 kHz modem and non-transparent service)
	7	9600bps(V.32)
	12	9600bps(V.34)
	14	14400bps(V.34)
	16	28800bps(V.34)
	17	33600bps(V.34)
	39	9600bps(V.120)
	43	14400bps(V.120)
	48	28800bps(V.120)
	51	56000bps(V.120)
	71	9600bps(V.110 or X.31 flag stuffing)
	75	14400bps(V.110 or X.31 flag stuffing)
	80	28800bps(V.110 or X.31 flag stuffing)
	81	38400bps(V.110 or X.31 flag stuffing)
	83	57600bps(V.110 or X.31 flag stuffing)
	84	64000bps(X.31 flag stuffing)
<name>	0	data circuit asynchronous (UDI or 3.1 kHz modem)
	1	data circuit synchronous (UDI or 3.1 kHz modem)
	4	data circuit asynchronous (RDI)
<ce>	0	transparent
	1	Non-transparent

**Example**

AT+CBST=?

+CBST: (0,7,12,14,16,17,39,43,48,51,71,75,80,81,83,84,116,134),(0,1,4),(0,1)

OK



AT+CBST?

+CBST: 0,0,1

OK

AT+CBST=0,0,1

OK

## 4.12 AT+CR Service Reporting Control

### Description

Write command controls whether or not intermediate result code “+CR: <serv>” is returned from the TA to the TE. If enabled, the intermediate result code is transmitted at the point during connect negotiation at which the TA has determined which speed and quality of service will be used, before any error control or data compression reports are transmitted, and before the intermediate result code CONNECT is transmitted.

### Syntax

Command	Response
AT+CR=<mode>	OK
AT+CR?	+CR:<mode> OK
AT+CR=?	+CR:(<mode>list) OK

### Defined values

Parameter	values	Explain
<mode>	0	Disables reporting
	1	Enables reporting
<serv>	ASYNC	Asynchronous transparent
	SYNC	Synchronous transparent
	REL ASYNC	Asynchronous non-transparent
	REL SYNC	Asynchronous non-transparent

### Example

AT+CR=?

+CR: (0,1)



```
OK
AT+CR=1
OK
```

## 4.13 AT+CRC Cellular Result Codes

### Description

This command controls whether or not to use the extended format of incoming call indication.

### Syntax

Command	Response
AT+CRC=<mode>	OK
AT+CRC?	+CRC:<mode> OK
AT+CRC=?	+CRC:(<mode>list) OK

### Defined values

Parameter	values	Explain
<mode>	0	Disable extended format
	1	Enable extended format
<type>	MO	When calling each other ,the other's mobile is ringing
	VOICE	Normal voice
	ASYNC	asynchronous transparent
	SYNC	Asynchronous transparent

### Example

```
ATD138XXXXXXXXX;
OK

^ORIG:5,0

+CRING: MO

^CONN:5,0
```



## 4.14 AT+CVHU Voice Hang Up Control

### Description

The command controls whether ATH can be used to disconnect the voice call.

### Syntax

Command	Response
AT+CVHU=<mode>	OK
AT+CVHU?	+CVHU:<mode> OK
AT+CVHU=?	+CVHU:(<mode>list) OK

### Defined values

Parameter	values	Explain
<mode>	0	ATH is disconnected
	1	ATH is ignored but “OK” response is returned.

### Example

```

ATD18521XXXXXX;
OK

^ORIG:1,0

^CONN:1,0
ATH
OK
AT+CVHU?
+CVHU: 1

OK
AT+CVHU=0
OK
ATH
OK

^CEND:1,19,29

```



## 4.15 ATSO Automatic Answer

### Description

The S-parameter command controls the automatic answering feature of the Module. If set to 000, automatic answering is disabled, otherwise it causes the Module to answer when the incoming call indication (RING) has occurred the number of times indicated by the specified value; and the setting will not be stored upon power-off, i.e. the default value will be restored after restart.

### Syntax

Command	Response
ATSO=<n>	OK
ATSO?	<n> OK

### Defined values

Parameter	values	Explain
<n>	0	Automatic answering mode is disable.
	1~255	Enable automatic answering on the ring number specified.

### Example

```
ATSO=3
OK

RING

RING

RING

^CONN:11,0
```

## 4.16 AT^NVAUTO Automatic Answer

### Description

The command used to set whether to automatically answer.

### Syntax

Command	Response
---------	----------



AT^NVAUTO=<mode>	OK
AT^NVAUTO?	^NVAUTO: <mode> OK

#### Defined value

Parameter	values	Explain
<mode>	0	Automatic answering mode is disable.
	1	Automatic answering mode is enable.

#### Example

```
AT^NVAUTO=1
OK
RING
^CONN:11,0
```

## 4.17 AT^DTMF Dual Tone Multi-Frequency

### Description

Call state, by signaling to send DTMF value to the network side.

### Syntax

Command	Response
AT^DTMF=<number>[,<on_length>[,<off_length>] ]	OK or +CME ERROR:<err>

### Defined values

Parameter	values	Explain
<number>	0-9,*,#,A,B,C,D	DTMF value
<on_length>	0	Press
	1	Lift
	95,150,200,250,300,350	DTMF tone duration, in ms
<off_length>	hold	Interval time of DTMF tone

### Example

```
ATD02150177336; //Dialled the operator.
```



```

OK

^ORIG:4,0

^CONN:4,0
AT^DTMF=8           //Dial 8006 extension
OK
AT^DTMF=0
OK
AT^DTMF=0
OK
AT^DTMF=6
OK
AT+CHUP
OK

^CEND:4,13,29

```

## 4.18 AT+SETVOLTE Set VOLTE

### Description

The command is used to open or close VOLTE , it take effect after the restart using the command AT+CFUN=1,1.

### Syntax

Command	Response
AT+SETVOLTE=<mode>	OK
AT+SETVOLTE?	+SETVOLTE: <mode> OK

### Defined values

Parameter	values	Explain
<mode>	0	Close VOLTE
	1	Open VOLTE (default)

### Example

```
AT+SETVOLTE?
```



+SETVOLTE: 1

OK

AT+SETVOLTE=0

OK

AT+CFUN=1,1

OK

AT+SETVOLTE?

+SETVOLTE: 0

OK

Shanghai YUGE



## Chapter 5. Short Message Related Commands

### 5.1 AT+CSMS Select Message Service

#### Description

The command is used to select messaging service <service>.

#### Syntax

Command	Response
AT+CSMS=<service>	+CSMS:<mt>,<mo>,<bm> OK
AT+CSMS?	+CSMS:<service>,<mt>,<mo>,<bm> OK
AT+CSMS=?	+CSMS:(<service>list) OK

#### Defined values

Parameter	values	Explain
<service>	0	SMS at command is compatible with GSM phase 2.
	1	SMS at command is compatible with GSM phase 2+.
<mt>	0	Mobile terminated messages is not supported.
	1	Mobile terminated messages is supported.
<mo>	0	Mobile originated messages is not supported.
	1	Mobile originated messages is supported.
<bm>	0	Broadcast type messages is not supported.
	1	Broadcast type messages is supported.

#### Example

```
AT+CSMS=?
```

```
+CSMS: (0-1)
```

```
OK
```

```
AT+CSMS=0
```

```
+CSMS: 1,1,1
```

```
OK
```

```
AT+CSMS?
```



```
+CSMS: 0,1,1,1
```

```
OK
```

## 5.2 AT+CPMS Preferred Message Storage

### Description

The command is used to select memory storages <mem1>, <mem2> and <mem3> to be used for reading, writing, etc.

### Syntax

Command	Response
AT+CPMS=<mem1>[,<mem2>[,<mem3>]]	+CPMS:<used1>,<total1>,<used2>,<total2>,<used3>,<total3> OK
AT+CPMS?	+CPMS:<mem1>,<used1>,<total1>,<mem2>,<used2>,<total2>,<mem3>,<used3>,<total3> OK
AT+CPMS=?	+CPMS:(<mem1>list),(<mem2>list),(<mem3>list) OK

### Defined values

Parameter	values	Explain
<mem1>	“SM”	SIM message storage,memory from which messages are read and deleted
	“ME”or“MT”	FLASH message storage,memory from which messages are read and deleted
	“SR”	Status report storage,memory from which messages are read and deleted
<mem2>	“SM”	SIM message storage,memory to which writing and sending operations are made
	“ME”or“MT”	FLASH message storage,memory to which writing and sending operations are made
	“SR”	Status report storage,memory to which writing and sending operations are made
<mem3>	“SM”	SIM message storage,memory to which received SMS



		is preferred to be stored
	“ME” or “MT”	FLASH message storage, memory to which received SMS is preferred to be stored
	“SR”	Status report storage, memory to which received SMS is preferred to be stored
<usedx>		Number of messages currently in <memX>.
<totalx>		Total number of message locations in <memX>.

**Example**

```

AT+CPMS="SM","SM","SM"
+CPMS: 20,50,20,50,20,50

OK
AT+CPMS?
+CPMS: "SM",20,50,"SM",20,50,"SM",20,50

OK
AT+CPMS=?
+CPMS: ("ME","MT","SM","SR"),("ME","MT","SM","SR"),("ME","MT","SM","SR")

OK
    
```

**5.3 AT+CMGF Select Short Message Format**

**Description**

The command is used to specify the input and output format of the short messages.

**Syntax**

Command	Response
AT+CMGF[=<mode>]	OK
AT+CMGF?	+CMGF: <mode>
AT+CMGF=?	OK +CMGF: (<mode>list)
	OK



### Defined values

Parameter	values	Explain
<mode>	0	PDU mode
	1	Text mode

### Example

```
AT+CMGF=?
```

```
+CMGF: (0-1)
```

```
OK
```

```
AT+CMGF=1
```

```
OK
```

```
AT+CMGS="138XXXXXXXXXX"
```

```
> 1111111111
```

```
+CMGS: 109
```

```
OK
```

## 5.4 AT+CSCA SMS Service Centre Address

### Description

This command write command updates the SMSC address when mobile originated SMS are transmitted. In text mode, the setting is used by write commands. In PDU mode, setting is used by the same commands, but only when the length of the SMSC address is coded into the <pdu> parameter which equals to zero

### Syntax

Command	Response
AT+CSCA=<sca>[,<tosca>]	OK
AT+CSCA?	+CSCA:<sca>,<tosca> OK
AT+CSCA=?	OK

### Defined values

Parameter	values	Explain
<sca>		Service center address.
<tosca>		Type of service center address.



### Example

```
AT+CSCA="+8613010314500"
OK
AT+CSCA?
+CSCA: "+8613010314500",145
OK
```

## 5.5 AT+CNMI New Message Indications to TE

### Description

The command is used to select the procedure how receiving of new messages from the network is indicated to the TE when TE is active, e.g. DTR signal is ON.

### Syntax

Command	Response
AT+CNMI=[<mode>[,<mt>[,<bm>[,<ds>[,<bfr>]]]]]	OK
AT+CNMI?	+CNMI:<mode>,<mt>,<bm>,<ds>,<bfr> OK
AT+CNMI=?	+CNMI:(<mode>list),(<mt>list),(<bm>list),(<ds>list),(<bfr>list) OK

### Defined values

Parameter	values	Explain
<mode>	0	Buffer unsolicited result codes in the TA. If TA result code buffer is full, indications can be buffered in some other place or the oldest indications may be discarded and replaced with the new received indications.
	1	Discard indication and reject new received message unsolicited result codes when TA-TE link is reserved (e.g. in on-line data mode). Otherwise forward them directly to the TE.
	2	Buffer unsolicited result codes in the TA when TA-TE link is reserved (e.g. in on-line data mode) and flush them to the



		TE after reservation. Otherwise forward them directly to the TE
<mt>	0	No SMS-DELIVER indications are routed to the TE.
	1	If SMS-DELIVER is stored into ME/TA, indication of the memory location is routed to the TE using unsolicited result code: +CMTI: <mem3>,<index>.
	2	SMS-DELIVERs (except class 2 messages and messages in the message waiting indication group (store message)) are routed directly to the TE using unsolicited result code: +CMT:[<alpha>],<length><CR><LF><pdu> (PDU mode enabled); or +CMT:<oa>,[<alpha>],<scts>[,<tooa>,<fo>,<pid>,<dcs>,<sca>,<tosca>,<length>] <CR> <LF><data>
	3	Class 3 SMS-DELIVERs are routed directly to TE using unsolicited result codes defined in <mt>=2. Messages of other data coding schemes result in indication as defined in <mt>=1.
<bm>	0	No CBM indications are routed to the TE.
	1	New CBMs are routed directly to the TE using unsolicited result code: +CBM: <length><CR><LF><pdu> (PDU mode enabled); or +CBM: <sn>,<mid>,<dcs>,<page>,<pages><CR><LF><data> (text mode enabled)
<ds>	0	No SMS-STATUS-REPORTs are routed to the TE.
	1	SMS-STATUS-REPORTs are routed to the TE using unsolicited result code: +CDS: <length><CR><LF><pdu> (PDU mode enabled); or +CDS: <fo>,<mr>,[<ra>],[<tora>],<scts>,<dt>,<st> (text mode enabled)



	2	If SMS-STATUS-REPORT is stored into ME/TA, indication of the memory location is routed to the TE using unsolicited result code: +CDSI: <mem3>,<index>.
<bfr>	0	TA buffer of unsolicited result codes defined within this command is flushed to the TE when <mode> 1 to 3 is entered
	1	TA buffer of unsolicited result codes defined within this command is cleared when <mode> 1 to 3 is entered.

**Example**

```

AT+CNMI=1,1
OK
+CMTI: "SM",20 //short message is coming
AT+CNMI=1,2
OK
+CMT: "+86138XXXXXXXXX",,"16/01/13,16:22:10+32" //short message is coming
5555555555
AT+CNMI?
+CNMI: 1,2,0,0,0
OK
AT+CNMI=?
+CNMI: (0,1,2),(0,1,2,3),(0,2),(0,1,2),(0,1)
OK
    
```

## 5.6 AT+CMGW Write Message to Memory

**Description**

AT+CMGW write and execution commands store a short message from TE to memory storage <mem2>. Memory location <index> of the stored message is returned.

**Syntax**

Command	Response
AT+CMGW=<da>[,<toda>[,<stat>]]	+CMGW: <index>



text to send <ctrl-Z/ESC> (TEXT mode)	OK
AT+CMGW=<length>[,<stat>] PDU to send <ctrl-Z/ESC> (PDU mode)	+CMGW: <index>  OK
AT+CMGW=?	OK

### Defined values

Parameter	values	Explain	
<da>		Destination-Address.	
<tda>		TP-Destination-Address, Type-of-Address octet in integer format. (when first character of <da> is +(IRA 43) default is 145, otherwise default is 129).	
<stat>	text	“REC UNREAD”	Received unread messages
		“REC READ”	Received read messages
		“STO UNSENT”	Stored unsent messages
		“STO SENT”	Stored sent messages
		“ALL”	All messages
	PDU	0	Received unread messages
		1	Received read messages
		2	Stored unsent messages
		3	Stored sent messages
		4	All messages

### Example

```
AT+CMGW="138XXXXXXXXXX"
```

```
> 22222222
```

```
+CMGW: 21
```

```
OK
```

```
AT+CMSS=21
```

```
+CMSS: 110
```

```
OK
```



## 5.7 AT+CMSS Send Message From Storage

### Description

The command is used to send message with location value `<index>` from preferred message storage `<mem2>` to the network (SMS-SUBMIT or SMS-COMMAND).

### Syntax

Command	Response	
AT+CMSS=<index>[, <da>[,<toda>]]	text	+CMSS:<mr>[,<scts>] OK
	PUD	+CMSS:<mr>[,<ackpdu>] OK

### Defined values

Parameter	values	Explain
<index>		Value in the range of location numbers supported by the associated memory and start with zero.
<da>		Destination-Address, Address-Value field in string format; BCD numbers (or GSM 7 bit default alphabet characters) are converted to characters of the currently selected TE character set, type of address given by <toda>.
<toda>		Type of recipient address.
<mr>		Message reference.
<scts>		Service center time stamp.
<ackpdu>		Format is same for <pdu> in case of SMS, but without 3GPP TS 24.011 SC address field and parameter shall be bounded by double quote characters like a normal string type parameter.

### Example

```
AT+CMGW="138XXXXXXXXX"
> 22222222

+CMGW: 21

OK
```



```
AT+CMSS=21
```

```
+CMSS: 110
```

```
OK
```

## 5.8 AT+CMGS Send Message

### Description

AT+CMGS write command sends a short message from TE to network (SMS- After invoking the write command, wait for the prompt “>” and then start to write the message. Then enter <CTRL-Z> to indicate the ending of PDU and begin to send the message. Sending can be cancelled by giving <ESC> character. Abortion is acknowledged with “OK”, though the message will not be sent. The message reference <mr> is returned to the TE on successful message delivery. The value can be used to identify message upon unsolicited delivery status report result code.

### Syntax

Command	Response
AT+CMGS=<da>[,<toda>] text to send <ctrl-Z/ESC> (TEXT mode)	+CMGS: <mr>  OK
AT+CMGS=<length> PDU to send <ctrl-Z/ESC> (PDU mode)	+CMGS: <mr>  OK

### Defined values

Parameter	values	Explain
<da>		Destination-Address, Address-Value field in string format; BCD numbers (or GSM 7 bit default alphabet characters) are converted to characters of the currently selected TE character set, type of address given by <toda>.
<toda>		TP-Destination-Address, Type-of-Address octet in integer format. (when first character of <da> is +(IRA 43) default is 145, otherwise default is 129).
<length>		Message length.
<mr>		Message reference.



### Example

```

AT+CMGF=1 //text mode
OK
AT+CMGS="138XXXXXXXX"<CR>
>ABCD123456<Ctrl+Z>
+CMGS : 97

OK
AT+CMGF=0 //PDU mode
OK
AT+CMGS=19
>0031000D91683158714209F80000A704D4F29C0E<Ctrl+Z>
+CMGS: 98

OK

```

## 5.9 AT+CMGL List Messages

### Description

This command write command returns messages with status value <stat> from preferred message storage <mem1> to the TE. If the status of the message is “REC UNREAD”, the status in the storage changes to “REC READ”. When executing command AT+CMGL without status value <stat>, it will report the list of SMS with “REC UNREAD” status.

### Syntax

Command		Response
AT+CMGL[=<stat>]	PDU	+CMGL:<index>,<stat>,[<alpha>],<length><CR><LF><PDU> OK
	text	+CMGL:<index>,<stat>,<da>/<oa>,[<alpha>],[<scts>][<tooa>/<toda>,<length>]<CR><LF><data>[...] OK
AT+CMGL=?		+CMGL: (<stat>list) OK



## Defined values

Parameter	values	Explain	
<index>		Value in the range of location numbers supported by the associated memory and start with zero.	
<stat>	text	“REC UNREAD”	Received unread messages
		“REC READ”	Received read messages
		“STO UNSENT”	Stored unsent messages
		“STO SENT”	Stored sent messages
		“ALL”	All messages
	PDU	0	Received unread messages
		1	Received read messages
		2	Stored unsent messages
		3	Stored sent messages
		4	All messages
<alpha>		String type alphanumeric representation of <da> or <oa> corresponding to the entry found in MT phonebook; implementation of this feature is manufacturer specific; used character set should be the one selected with command Select TE Character Set <a href="#">AT+CSCS</a> .	
<length>		Message length.	
<da>		Destination-Address, Address-Value field in string format; BCD numbers (or GSM 7 bit default alphabet characters) are converted to characters of the currently selected TE character set, type of address given by <todo>.	
<oa>		Originating-Address, Address-Value field in string format; BCD numbers (or GSM 7 bit default alphabet characters) are converted to	



		characters of the currently selected TE character set, type of address given by <a href="#">&lt;tooa&gt;</a> .
<scts>		Service center time stamp.
<tooa>		Type of originating address.
<toda>		Type of recipient address.

## 5.10 AT+CMGR Read Message

### Description

The command returns message with location value <index> from message storage <mem1> to the TE.

### Syntax

Command		Response
AT+CMGR=<index>	text	+CMGR:<stat>,<number>,[<reserved>],<time> <data>  OK
	PDU	+CMGR:<stat>,[<alpha>],<length> <pdu>  OK
AT+CMGR=?		OK

### Defined value

Parameter	values	Explain	
<index>		Value in the range of location numbers supported by the associated memory and start with zero.	
<stat>	text	“REC UNREAD”	Received unread messages
		“REC READ”	Received read messages
		“STO UNSENT”	Stored unsent messages
		“STO SENT”	Stored sent messages
		“ALL”	All messages
	PDU	0	Received unread messages
		1	Received read messages
		2	Stored unsent messages



		3	Stored sent messages
		4	All messages
<number>			Sender number
<reserved>			null
<time>			TP-Discharge-Time in time-string format :”yy/MM/dd , hh:mm:ss+zz”, where characters indicate year (two last digits),month,day,hour,minutes,seconds and time zone.
<alpha>			String type alphanumeric representation of <da> or <oa> corresponding to the entry found in MT phonebook; implementation of this feature is manufacturer specific; used character set should be the one selected with command Select TE Character Set AT+CSCS.
<length>			Message length.

### Example

```
AT+CNMI=1,1
```

```
OK
```

```
+CMTI: "SM",22
```

```
AT+CMGR=22
```

```
+CMGR: 0,,27
```

```
0891683110304105F0240D916831X8XXXXXXFX00006110316123112307B55AAD56AB  
D500
```

```
OK
```

```
+CMTI: "SM",23
```

```
AT+CMGR=23
```

```
+CMGR: "REC UNREAD","+86138XXXXXXXXX",,"16/01/13,16:34:08+32"  
55555
```

```
OK
```



## 5.11 AT+CMGD Delete Message

### Description

The command is used to delete message from preferred message storage <mem1> location <index>.

### Syntax

Command	Response
AT+CMGD=<index>[,<delflag>]	OK
AT+CMGD=?	OK

### Defined value

Parameter	values	Explain
<index>	0-255	Value in the range of location numbers supported by the associated memory and start with zero.
<delflag>	0	Delete the message specified in <index>.(or omitted)
	1	Delete all read messages from preferred message storage.
	2	Delete all read messages from preferred message storage and sent mobile originated messages.
	3	Delete all read messages from preferred message storage, sent and unsend mobile originated messages
	4	Delete all messages from preferred message storage including unread messages.

### Example

```
AT+CMGD=0,4 //Delete all messages
OK
AT+CMGL
OK
AT+CMGL="ALL"
OK
```



## Chapter 6. Supplementary Service Commands

### 6.1 AT+CLIP Calling Line Identification Presentation

#### Description

The command refers to the GSM/UMTS supplementary service CLIP (Calling Line Identification Presentation) that enables a called subscriber to get the calling line identity (CLI) of the calling party when receiving a mobile terminated call.

Write command enables or disables the presentation of the CLI at the TE. It has no effect on the execution of the supplementary service CLIP in the network.

When the presentation of the CLI at the TE is enabled (and calling subscriber allows), +CLIP: <number>, <type> „,[<alpha>][,<CLI validity>]] response is returned after every RING (or +CRING: <type>; refer sub clause "Cellular result codes +CRC") result code sent from TA to TE. It is manufacturer specific if this response is used when normal voice call is answered.

#### Syntax

Command	Response
AT+CLIP=?	+CLIP : (<n>list) OK
AT+CLIP?	+CLIP : <n>,<m> OK
AT+CLIP=<n>	OK
	+CLIP:<number>,<type> „,[<alpha>][,<CLI validity>]]

#### Defined value

Parameter	values	Explain
<n>	0	Disable
	1	Enable
<m>	0	CLIP not provisioned
	1	CLIP provisioned
	2	Unknown (e.g. no network, etc.)
<number>		String type phone number of calling address in format specified by <type>.
<type>	128	Restricted number type includes unknown type and format



	145	International number type
	161	National number.The network support for this type is optional
	177	Network specific number,ISDN format
	129	Otherwise

**Example**

```
AT+CLIP=1
OK
+CLIP: "138XXXXXXXX",129,,0

RING

+CLIP: "138XXXXXXXX",129,,0
```

## 6.2 AT+CCFC Call Forwarding Number and Conditions Control

**Description**

The command allows control of the call forwarding supplementary service. Registration, erasure, activation, deactivation, and status query are supported.

**Syntax**

Command	Response	
AT+CCFC=?	OK	
AT+CCFC=<reason>,<mode> [,<number>[,<type>[,<class>[,<subaddr>[,<atype>[,<time>]]]]]	mode=2	OK
	mode≠2	+CCFC:<status>,<class1>[,<number>,<type>[,<subaddr>,<atype>[,<time>]]] +CCFC:<status>,<class2>[,<number>,<type>[,<subaddr>,<atype>[,<time>]]] [...] OK

**Defined value**

Parameter	values	Explain
<reason>	0	Unconditional
	1	Mobile busy
	2	No reply



	3	Not reachable
	4	All call forwarding
	5	All conditional call forwarding
<mode>	0	Disable
	1	Enable
	2	Query status
	3	Registration
	4	Erasure
<number>		String type phone number of forwarding address in format specified by <type>.
<type>	145	Dialing string <number> includes international access code character '+'
	129	Otherwise
<class>	1	Voice (telephony)
	2	Data (refers to all bearer services)
	4	Fax (facsimile services)
	16	Data circuit sync
	32	Data circuit async
	64	Dedicated packet access
	128	Dedicated PAD access
	255	The value 255 covers all classes
<subaddr>		String type sub address of format specified by <satype>.
<satype>		Type of sub address octet in integer format, default 128.
<time>	1-30	When "no reply" is enabled or queried, this gives the time in seconds to wait before call is forwarded, default value 20.
<status>	0	Not active
	1	Active

**NOTE:**

China Telecom call transfer setting method :

Unconditional AT+CDV\*720<number>      Cancel AT+CDV\*720



No reply	AT+CDV*920<number>	Cancel AT+CDV*920
Mobile busy	AT+CDV*900<number>	Cancel AT+CDV*900

**Defined value**

```
AT+CCFC=0,3,"138XXXXXXXXX"
OK // call forward to number 138XXXXXXXXX
AT+CCFC=0,2
+CCFC: 1,1,"+86138XXXXXXXXX",145,,
OK
AT+CCFC=0,4
OK
AT+CCFC=0,2
+CCFC: 0,255
OK
```

### 6.3 AT+CCWA Call Waiting Control

**Description**

The AT+CCWA command allows control of the call waiting supplementary service.

**Syntax**

Command	Response
AT+CCWA?	+CCWA: <n> OK
AT+CCWA=?	+CCWA: (<n>list) OK
AT+CCWA=[<n>[,<mode>[,<class>]]]	OK or +CCWA:<status>,<class1>[<CR><LF> +CCWA:<status>,<class2>[...]]

**Defined value**

Parameter	values	Explain
<n>	0	Disable presentation of an unsolicited result code
	1	Enable presentation of an unsolicited result code
<mode>	0	Disable



	1	Enable
	2	Query status
<class>	1	Voice (telephony)
	2	Data (refers to all bearer services)
	4	Fax (facsimile services)
	8	Short message
	16	Data circuit sync
	32	Data circuit async
	64	Dedicated packet access
	128	Dedicated PAD access
	255	The value 255 covers all classes
<status>	0	Disable
	1	Enable

### Example

```

ATD10010;
OK

^ORIG:0,0

^CONN:0,0

+CCWA: "138XXXXXXXXX",129,1

```

## 6.4 AT+CHLD Call Related Supplementary Services

### Description

The command allows the control of the following call related services:

1. A call can be temporarily disconnected from the ME but the connection is retained by the network.
2. Multiparty conversation (conference calls).
3. The served subscriber who has two calls (one held and the other either active or alerting) Can connect the other parties and release the served subscriber's own connection. Calls can be put on hold, recovered, released, added to conversation, and transferred.



## Syntax

Command	Response
AT+CHLD=?	+CHLD: (list of supported <n>s) OK
AT+CHLD=[<n>]	OK Or ERROR/+CME ERROR:<err>

## Defined value

Parameter	values	Explain
<n>	0	Terminate all held calls; or set User Determined User Busy for a waiting call
	1	Terminate all active calls and accept the other call (waiting call or held call)
	1X	Terminate a specific call X
	2	Place all active calls on hold and accept the other call (waiting call or held call) as the active call
	2X	Place all active calls except call X on hold
	3	Add the held call to the active calls
	4	Connect two calls and cut off the connection between users and them simultaneously

## Example

```

ATD10010;
OK

^ORIG:0,0

^CONN:0,0

+CCWA: "138XXXXXXXXX",129,1
AT+CHLD=2           //Set 10010 for call hold, answer 138XXXXXXXXX call
OK
AT+CHLD=3           //Add the 10010 call to the active calls
OK
AT+CLCC

```



```
+CLCC: 1,0,0,0,1,"10010",129
+CLCC: 2,1,0,0,1,"138XXXXXXXXX",129

OK
```

## 6.5 AT+CUSD Unstructured Supplementary Service Data

### Description

The command allows control of the Unstructured Supplementary Service Data (USSD). Both network and mobile initiated operations are supported. Parameter <n> is used to disable/enable the presentation of an unsolicited result code (USSD response from the network, or network initiated operation) +CUSD: <m>[,<str>,<dc>] to the TE. In addition, value <n>=2 is used to cancel an ongoing USSD session.

### syntax

Command	Response
AT+CUSD=?	+CUSD: (list of supported <n>s) OK
AT+CUSD?	+CUSD: <n> OK
AT+CUSD= <n>[,<str>[,<dc>]]	OK or ERROR or +CME ERROR: <err>
AT+CUSD	Set default value (<n>=0): OK

### Defined value

Parameter	values	Explain
<n>	0	Disable the result code presentation in the TA
	1	Enable the result code presentation in the TA
	2	Cancel session (not applicable to read command response)
<str>		String type USSD- string.
<dc>		Cell Broadcast Data Coding Scheme in integer format (default 0).
<m>	0	No further user action required (network initiated USSD-Notify, or no further information needed after mobile



		initiated operation)
	1	Further user action required (network initiated USSD-Request, or further information needed after mobile initiated operation)
	2	USSD terminated by network

Shanghai YUGE



## Chapter 7.SIM Card Related Commands

### 7.1 AT+CLCK Facility Lock

#### Description

The command is used to lock, unlock or interrogate a ME or a network facility <fac>. Password is normally needed to do such actions.

#### Syntax

Command	Response
AT+CLCK=<fac>,<mode>[,<passwd>[,<class>]]	When <mode>=2 : +CLCK:<status>[,<class>] OK When <mode>≠2 : OK
AT+CLCK=?	+CLCK: (<fac>list) OK

#### Defined value

Parameter	values	Explain
<fac>	"AO"	Barr All Outgoing Calls
	"OI"	Barr Outgoing International Calls
	"OX"	Barr Outgoing International Calls except to Home Country
	"AI"	Barr All Incoming Calls
	"IR"	Barr Incoming Calls when roaming outside the home country
	"PN"	Network Personalization
	"PP"	Service Provider Personalization
	"PU"	Network subset Personalization
	"PC"	Corporate Personalization
	"PF"	Lock Phone to the very First inserted SIM card or USIM card
	"SC"	Lock SIM card or USIM card
<mode>	0	Unlock
	1	Lock



	2	Query status
<passwd>		Password.
<class>	1	Voice (telephony)
	2	Data (refers to all bearer services)
	4	Fax (facsimile services)
	8	Short message service
	16	Short message service
	32	Short message service
	64	Dedicated packet access
<status>	0	Not active
	1	Active

### Example

```
AT+CLCK=?
```

```
+CLCK:
```

```
("AB","AC","AG","AI","AO","IR","OI","OX","SC","FD","PN","PU","PP","PC","PF")
```

```
OK
```

```
AT+CLCK="SC",2
```

```
+CLCK: 0
```

```
OK
```

```
AT+CLCK="SC",1,"1234"
```

```
OK
```

```
AT+CLCK="SC",2
```

```
+CLCK: 1
```

```
OK
```

## 7.2 AT+CPWD Change Password

### Description

Write command sets a new password for the facility lock function defined by command Facility Lock AT+CLCK.



Test command returns a list of pairs which present the available facilities and the maximum length of their password.

### Syntax

Command	Response
AT+CPWD=<fac>,<oldpwd>,<newpwd>	OK
AT+CPWD=?	+CPWD: (<fac>,<pwdlength>)list OK

### Defined value

Parameter	values	Explain
<fac>	"AO"	Barr All Outgoing Calls
	"OI"	Barr Outgoing International Calls
	"OX"	Barr Outgoing International Calls except to Home Country
	"AI"	Barr All Incoming Calls
	"IR"	Barr Incoming Calls when roaming outside the home country
	"PN"	Network Personalization
	"PP"	Service Provider Personalization
	"PU"	Network subset Personalization
	"PC"	Corporate Personalization
	"PF"	Lock Phone to the very First inserted SIM card or USIM card
	"SC"	Lock SIM card or USIM card
	"FD"	SIM fixed dialing memory feature
<oldpwd>		String type, old password .
<newpwd>		String type, new password .
<pwdlength>		Integer type, max length of password

### Example

```
AT+CPIN?
```

```
+CPIN: READY
```

```
OK
```

```
AT+CPWD="SC","1234","0000" //Change SIM card password to "0000"
```



```

OK
AT+CFUN=1,1 //Restart module
OK
AT+CPIN?
+CPIN: SIM PIN //PIN code is locked

OK
AT+CPIN="1234" //Enter the old password
+CME ERROR: incorrect password //Password is incorrect
AT+CPIN="0000" //Enter the new password
OK
AT+CPIN? //SIM card is ready
+CPIN: READY

OK

```

### 7.3 AT+CPIN Enter PIN

#### Description

If the password request is PIN or PIN2 , please enter AT+CPIN=<PIN> to examine.

If the password request is PUK or PUK2 , please enter AT+CPIN=<PIN>,<newpin> to unlock the SIM card. The first parameter is SIM PUK or SIM PUK2 , the second parameter is new PIN or PIN2 .

#### Syntax

Command	Response
AT+CPIN=<pin>[,<newpin>]	OK
AT+CPIN?	+CPIN: <code> OK
AT+CPIN=?	OK

#### Defined value

Parameter	values	Explain
<pin>		Password (string type).
<newpin>		New password (string type)
<code>	READY	ME is not pending for any password



	SIM PIN	ME is waiting SIM PIN to be given
	SIM PUK	ME is waiting SIM PUK to be given
	SIM PIN2	ME is waiting SIM PIN2 to be given
	SIM PUK2	ME is waiting SIM PUK2 to be given

### Example

```
AT+CPIN?
```

```
+CPIN: READY
```

```
OK
```

## 7.4 AT+CRSM Restricted SIM Access

### Description

The command offers easy and limited access to the SIM database.

### Syntax

Command	Response
AT+CRSM=<command>[,<fileID>[,<P1>,<P2>,<P3>[,<data>]]]	+CRSM:<sw1>,<sw2>[,<response>]
AT+CRSM=?	OK

### Defined value

Parameter	values	Explain
<command>	176	READ BINARY
	178	READ RECORD
	192	GET RESPONSE
	214	UPDATE BINARY
	220	UPDATE RECORD
	242	STATUS
<fileID>		Identifier for an elementary data file on SIM, if used by <command>.
<P1>,<P2>,<P3>		Integer type; parameters transferred by the MT to the SIM.
<data>		Information which shall be written to the SIM
<sw1>,<sw2>		Status information from the SIM about the



		execution of the actual command. These parameters are delivered to the TE in both cases, on successful or failed execution of the command.
<response>		Response data from SIM.

**Example**

```
AT+CRSM=242
+CRSM:
144,0,"62248202782183025F3A8A01058B066F0601010001C60F9001A0950100830111830
101830181"
OK
```

## 7.5 AT+CIND Indicator Control

**Description**

The command simply controls the registration / deregistration of indicators. This command currently only supports query of LTE, WCDMA, and GSM.

**Syntax**

Command	Response
AT+CIND?	+CIND: <battchg>,<signal>,<service>,<call>,<roam>,<smsfull>,<GPRS coverage>,<callsetup>  OK
AT+CIND=?	+CIND: ("battchg",(0-5)),("signal",(0-5)),("service",(0-1)),("call",(0-1)),("roam",(0-1)),("smsfull",(0-1)),("GPRS coverage",(0-1)),("callsetup",(0-3))  OK

**Defined value**

Parameter	values	Explain
<battchg>		Reserve
<signal>	0-5	Signal quality. 0 is the least field strength. 5 is the greatest field strength.
<service>	0	No available network services



	1	Available network services
<call>	0	No call connection
	1	Call connection has been established
<roam>	0	No roaming
	1	Roaming
<smsfull>	0	A short message memory locations are available
	1	A short message memory storage in the MT has become full
<GPRS coverage>	0	Data not attached
	1	Data attachment
<callsetup>	0	No calling
	1	Module called,ringing
	2	Start calling
	3	Module calling,ringing

### Example

```
AT+CIND?
```

```
+CIND: 0,4,1,1,0,0,1,0
```

```
OK
```

```
AT+CIND=?
```

```
+CIND:
```

```
("battchg",(0-5)),("signal",(0-5)),("service",(0-1)),("call",(0-1)),("roam",(0-1)),("smsfull",(0-1)),("GPRS coverage",(0-1)),("callsetup",(0-3))
```

```
OK
```

## 7.6 AT+CMER Mobile Termination Event Reporting

### Description

The set command enables and disables the presentation of URC for event reporting.

### Syntax

Command	Response
AT+CMER=[<mode>[,<keyp>[,<disp>[,<ind>[,<bfr>[,<tscrn>]]]]]	OK
AT+CMER?	+CMER:



	<mode>,<keyp>,<disp>,<ind>,<bfr>,<tscrn> OK
AT+CMER=?	+CMER: (0-3),(0),(0),(0-1),(0-1) OK

### Defined value

Parameter	values	Explain
<mode>	0	Close event reporting
	1,2,3	Open event reporting
<keyp>	0	No keypad event reporting
<disp>	0	No display event reporting
<ind>	0	No indicator event reporting
	1	Indicator event reporting using result code +CIEV: < ind>,<value>
<bfr>		Reserve
<tscrn>		Reserve



## Chapter 8. Packet Domain Commands

### 8.1 AT+CGDCONT Define PDP Context

#### Description

The set command specifies PDP context parameter values for a PDP context identified by the (local) context identification parameter <cid>. The number of PDP contexts that may be in a defined state at the same time is given by the range returned by the test command. A special form of the write command (AT+CGDCONT=<cid>) causes the values for context <cid> to become undefined.

#### Syntax

Command	Response
AT+CGDCONT=[<cid>[,<PDP_type>[,<APN>[,<PDP_addr>[,<d_comp>[,<h_comp>]]]]]]	OK
AT+CGDCONT?	+CGDCONT:<cid>,<PDP_type>,<APN>,<PDP_addr>,<data_comp>,<head_comp> [+CGDCONT:<cid>,<PDP_type>,<APN>,<PDP_addr>,<data_comp>,<head_comp>]
AT+CGDCONT=?	+CGDCONT:(supported<cid>s),<PDP_type>,,(<d_comp>list),(<h_comp>list) OK

#### Defined value

Parameter	values	Explain
<cid>	1-24,100-179	(PDP Context Identifier) a numeric parameter which specifies a particular PDP context definition.
<PDP_type>	"IP", "PPP", "IPV6", "IPV4V6"	(Packet Data Protocol type) a string parameter which specifies the type of packet data protocol.
<APN>		(Access Point Name) a string parameter which is a logical name that is used to select the GGSN or the external packet data network.
<PDP_addr>		A string parameter that identifies the MT in the address space applicable to the PDP.
<d_comp>	0-2	A numeric parameter that controls PDP data compression:



		0 --- off (default if value is omitted) 1 --- on 2 --- V.42bis
<h_comp>	0-4	A numeric parameter that controls PDP header compression: 0 --- off (default if value is omitted) 1 --- on 2 --- RFC1144 3 --- RFC2507 4 --- RFC3095

**Example**

```
AT+CGDCONT=1,"IP","3GNET"
OK
```

## 8.2 AT+CGATT PS Attach or Detach

**Description**

The execution command is used to attach the MT to, or detach the MT from, the Packet Domain service. After the command has completed, the MT remains in V.25ter command state. If the MT is already in the requested state, the command is ignored and the OK response is returned. Any active PDP contexts will be automatically deactivated when the attachment state changes to detached.

**Syntax**

Command	Response
AT+CGATT=[<state>]	OK
AT+CGATT?	+CGATT: <state> OK
AT+CGATT=?	+CGATT: (<state>list) OK

**Defined value**

Parameter	values	Explain
<state>	0-1	Indicates the state of Packet Domain attachment: 0 --- detached 1 --- attached



### Example

```
AT+CGATT?
```

```
+CGATT: 1
```

```
OK
```

```
AT+CGATT=0
```

```
OK
```

## 8.3 AT+CGACT PDP Context Activate or Deactivate

### Description

The write command is used to activate or deactivate the specified PDP context (s). If the MT is not PS attached when the activation form of the command is executed, the MT first performs a PS attach and then attempts to activate the specified contexts.

### Syntax

Command	Response
AT+CGACT=<state>[,<cid>[,<cid>[,...]]]	OK
AT+CGACT?	+CGACT: <cid>,<state> [+CGACT: <cid>,<state>[...]]
AT+CGACT=?	+CGACT: (<state>list) OK

### Defined value

Parameter	values	Explain
<state>	0-1	Indicates the state of PDP context activation 0 --- Deactivated 1 --- Activated
<cid>	1-24,100-179	A numeric parameter which specifies a particular PDP context definition

### Example

```
AT+CGACT?
```

```
+CGACT: 1,0
```

```
+CGACT: 100,1
```

```
+CGACT: 101,0
```



OK

## 8.4 ATD\*99# Initiate Data Connection

### Description

This command will enable the MT to initiate a series of necessary operations to establish a communication with PDN.

### Syntax

Command	Response
ATD*99#[* [<called_address>] [* <L2P>] [* [<cid>]]]#	CONNECT 150000000

### Defined value

Parameter	values	Explain
<called_address>		Ignore
<L2P>	“PPP”	
<cid>	1-24,100-179	A numeric parameter which specifies a particular PDP context definition

### Example

```
ATD*99#
CONNECT 150000000
```

## 8.5 AT^DATAMODE PPP Dial-Up Status

### Description

The command used to check the current PPP dial-up status.

### Syntax

Command	Response
AT^DATAMODE	^DATAMODE:<mode>,<stat> OK

### Defined value

Parameter	values	Explain
<mode>	0-1	0 --- PPP dial-up disconnected 1 --- PPP dial-up connection



<stat>	0-1	0 --- Not registered in the net 1 --- registered in the net
--------	-----	--

**Example**

```
AT^DATAMODE
^DATAMODE:0,1

OK
AT^DATAMODE
^DATAMODE:1,1 //PPP dial success

OK
```

**8.6 AT^DATADOWN Disconnect Current PPP Dial****Description**

Used to disconnect the currently existing PPP dial-up connection.

**Syntax**

Command	Response
AT^DATADOWN	OK Or ERROR

**Example**

```
AT^DATAMODE
^DATAMODE: 1,1

OK
AT^DATADOWN
OK
AT^DATAMODE
^DATAMODE: 0,1

OK
```



## 8.7 AT\$QCPDPP Authentication

### Description

The command is used to write authentication mode, user name and password.

### Syntax

Command	Response
AT\$QCPDPP=<n>,<auth_type>,<passwd>,<user>	OK
AT\$QCPDPP?	\$QCPDPP: 1,<auth_type>,"user" ..... \$QCPDPP: 16,<auth_type>,"user"  OK If you do not set the user name and password ,it will return: \$QCPDPP: <n>,0  OK
AT\$QCPDPP=?	\$QCPDPP: (1-24,100-179),(0-3),,  OK

### Defined value

Parameter	values	Explain
<n>	1-24,100-179	Configuration file number
<auth_type>	0-3	0 --- none 1 --- PAP 2 --- CHAP 3 --- PAP or CHAP
<passwd>		Password
<user>		User name

### Example

```
AT$QCPDPP?
$QCPDPP: 1,0

OK
```



## 8.8 AT+RMNETCFG GobiNet Mode

### Description

This command is used to select the operating system of the GobiNet dial.

### Syntax

Command	Response
AT+RMNETCFG=<mode>	OK
AT+RMNETCFG?	+RMNETCFG: <mode>
	OK

### Defined value

Parameter	values	Explain
<mode>	0-1	0 --- Linux 1 --- Windows

### Example

```
AT+RMNETCFG=1
OK
```

## 8.9 AT^NVAUTH Select the location of the user name and password to read

### Description

This command is used to select the location of the user name and password to read. The command takes effect after restart.

### Syntax

Command	Response
AT^NVAUTH=<ON/OFF>	OK
AT^NVAUTH?	^NVAUTH: <ON/OFF>
	OK
AT^NVAUTH=?	^NVAUTH: <ON/OFF>
	OK

### Defined value

Parameter	values	Explain
<ON/OFF>	0-1	0 --- off Using the user name and password in the SIM card 1 --- on Using the user name and password in



		the module.(default)
--	--	----------------------

**Example**

```

AT^NVAUTH?
^NVAUTH: 0

OK

AT^NVAUTH=1
OK
AT^NVAUTH?
^NVAUTH: 1

OK

AT^NVAUTH=?
^NVAUTH: <ON/OFF>

OK
    
```

### 8.10 AT^NETCFG NDIS interface settings

**Description**

This command used to set NDIS interface dial-up connection .

**Syntax**

Command	Response
AT^NETCFG=<inst>,<tech_pref>,<cdma_profile>,<umts_profile>,<ip_family_pref>,<mcast>,<call_type>,<apn,auth_type>[,<user>[,<passwd>]][,<mode>]]	OK

**Defined value**

Parameter	values	Explain
<inst>	0-17	NDIS interface instructions, currently available 0
<tech_pref>	32774	Wireless interface indication
<cdma_profile>		Retain
<umts_profile>		Retain
<ip_family_pref>	4	Address type
<mcast>		Retain



<call_type>		Retain
<apn>		APN string
<auth_type>	0-3	0 --- No authentication 1 --- PAP certification 2 --- CHAP certification 3 --- PAP or CHAP certification
<user>		User name
<password>		password
<mode>	0-1	1 --- Update 3GPP2 (CDMA) user name and password 0 --- Update 3GPP (not CDMA) user name and password

### Example

```
AT^NETCFG=0,32774,,,4,,,0,"CARD","CARD",1
```

```
OK
```

## 8.11 AT\$QCRMCall GobiNet dial-up connection

### Description

This command is used to initiate the GobiNet data dialing

### Syntax

Command	Response
AT\$QCRMCall=<Action>,<Instance>[,<IP Type>[,<Tech Pref>[,<umts_profile number>[,<cdma profile number>[,<APN>]]]]]	OK
AT\$QCRMCall?	OK

### Defined value

Parameter	values	Explain
<Action>	0-1	0 --- break off 1 --- connect
<Instance>	1-9	Channel number
<IP Type>	1-3	1 --- IPv4 2 --- IPv6 3 --- IPv4v6
<Tech Pref>	1-2	1 --- 3GPP2 2 --- 3GPP



<umts_profile number>	1-16	
<cdma profile number>		
<APN>		

### Example

```
AT$QCRM_CALL=1,1,3,2,1,1,"CTLTE"
```

```
$QCRM_CALL: 1, V4
```

```
OK
```

## 8.12 AT+CONN RNDIS dial-up connection

### Description

This command is used to initiate the RNDIS data dialing

### Syntax

Command	Response
AT+CONN=1,<mode>[,<APN>,<username>,<password>]	OK
AT+CONN=1,?	+CONN: <mode>,<APN>,<username>,<password> OK

### Defined value

Parameter	values	Explain
<mode>	0,1	0 --- break off 1 --- connect
<APN>		
<username>		
<password>		

### Example

```
AT+CONN=1,1,ctnet,ctnet@mycdma.cn,vnet.mobi
```

```
OK
```

```
AT+CONN=1,?
```

```
+CONN: 1,ctnet,ctnet@mycdma.cn,vnet.mobi
```

```
OK
```

```
AT+CONN=1,0
```



+CONN: 0,,,

OK

Shanghai YUGE



## Chapter 9. Phonebook Related Commands

### 9.1 AT+CNUM Subscriber Number

#### Description

The command can get the subscribers own number(s) from the SIM.

#### Syntax

Command	Response
AT+CNUM	+CNUM:[<alpha>],<number>,<type> OK
AT+CNUM=?	OK

#### Defined value

Parameter	values	Explain
<alpha>		Optional alphanumeric string associated with <number>,used character set should be the one selected with command Select TE Character Set AT+CSCS.
<number>		String type phone number of format specified by <type>.
<type>		Type of address octet in integer format

### 9.2 AT+CPBS Select Phonebook Memory Storage

#### Description

The command selects phonebook memory storage, which is used by other phonebook commands. Read command returns currently selected memory, and number of used locations and total number of locations in the memory when supported by manufacturer. Test command returns supported storages as compound value.

#### Syntax

Command	Response
AT+CPBS=<storage>	OK
AT+CPBS?	+CPBS:<storage>[,<used>,<total>] OK
AT+CPBS=?	+CPBS:(<storage>list) OK



### Defined value

Parameter	values	Explain
<storage>	“SM”	SIM phonebook
	“DC”	ME dialed calls list
	“MC”	ME missed (unanswered) calls list
	“ME”	Mobile equipment phonebook
	“RC”	ME received calls list
	“EN”	SIM (or ME) emergency number
<used>		Integer type, indicates the total number of used locations in selected memory
<total>		Integer type, indicates the total number of locations in selected memory

### Example

```
AT+CPBS?
```

```
+CPBS: "SM",6,500
```

```
OK
```

```
AT+CPBS="SM"
```

```
OK
```

## 9.3 AT+CPBR Read Phonebook Entries

### Description

TA returns phonebook entries in location number range <index1>...<index2> from the current phonebook memory storage selected with +CPBS. If <index2> is left out, only location <index1> is returned. <index1> is returned.

### Syntax

Command	Response
AT+CPBR=<index1> [,<index2>]	+CPBR:<index1>,<number>,<type>,<text> [...] +CPBR:<index2>,<number>,<type>,<text>]  OK
AT+CPBR=?	+CPBR:(<index>list),[<nlength>], [<tlength>]  OK



### Defined value

Parameter	values	Explain
<index1>,<index2>		Integer type value in the range of location numbers of phonebook memory.
<number>		String type, phone number of format <type>, the maximum length is <nlength>.
<type>	129,145, 161	Type of address octet in integer format 129 --- Unknown type 145 --- International type(contains the character "+" ) 161 --- National type
<text>		String type field of maximum length <tlength>; often this value is set as name.
<nlength>		Integer type value indicating the maximum length of field <number>.
<tlength>		Integer type value indicating the maximum length of field <text>.

### Example

```
AT+CPBW=1,"10000",129,"DX"
OK
AT+CPBR=1
+CPBR: 1,"10000",129,"DX",,"",0,,
OK
```

## 9.4 AT+CPBW Write Phonebook Entry

### Description

Writes phonebook entry in location number <index> in the current phonebook memory storage selected with +CPBS. If <index> is left out, but <number> is given, entry is written to the first free location in the phonebook.

### Syntax

Command	Response
AT+CPBW=[<index>][,<number>[,<type>[,<text>]]]	OK



AT+CPBW=?	+CPBW:(<index>list),[<nlength>],(<type>list),[<tlength>] OK
-----------	--

#### Defined value

Parameter	values	Explain
<index>		Integer type values in the range of location numbers of phonebook memory
<number>		String type, phone number of format <type>, the maximum length is <nlength>.It must be an non-empty string
<type>		Type of address octet in integer format
<text>		String type field of maximum length <tlength>
<nlength>		Integer type value indicating the maximum length of field <number>.
<tlength>		Integer type value indicating the maximum length of field <text>.



## Chapter 10. Network Service Commands

### 10.1 AT+COPS Operator Selection

#### Description

Write command forces an attempt to select and register the GSM/UMTS network operator.

Read command returns the current mode and the currently selected operator.

Test command returns a list of quadruplets, each representing an operator present in the network.

#### Syntax

Command	Response
AT+COPS=[<mode>[,<format> >[,<oper>]]]	OK
AT+COPS?	+COPS: <mode>[,<format>,<oper>,<sys>] OK
AT+COPS=?	+COPS:[(<stat>,long<oper>,short<oper>,numeric<oper>)]s[,(,<mode>list),(,<format>list)] OK

#### Defined value

Parameter	values	Explain
<mode>	0-4	0 --- Automatic mode; <oper> field is ignored 1 --- Manual operator selection. <oper> field must be present. 2 --- Force deregister 3 --- Set only <format> 4 --- Manual/automatic
<format>	0-2	0 --- Long format alphanumeric <oper> 1 --- Short format alphanumeric <oper> 2 --- Numeric <oper>
<oper>		String type; <format> indicates if the format is alphanumeric or numeric
<sys>	0,2,7	0 --- GSM 2 --- 3G 7 --- LTE



<code>&lt;stat&gt;</code>	0-3	0 --- unknown 1 --- available 2 --- current 3 --- forbidden
---------------------------	-----	--

### Example

`AT+COPS?`

`+COPS: 0,0,"CHN-UNICOM",7`

OK

## 10.2 AT+CREG Network Registration

### Description

Set command controls the presentation of an unsolicited result code +CREG: `<stat>` when `<n>=1` and there is a change in the MT network registration status, or code +CREG: `<stat>[,<lac>,<ci>]` when `<n>=2` and there is a change of the network cell.

### Syntax

Command	Response
<code>AT+CREG=[&lt;n&gt;]</code>	OK
<code>AT+CREG?</code>	+CREG: <code>&lt;n&gt;,&lt;stat&gt;</code> OK
<code>AT+CREG=?</code>	+CREG: ( <code>&lt;n&gt;</code> list) OK

### Defined value

Parameter	values	Explain
<code>&lt;n&gt;</code>	0-2	0 --- Disable network registration unsolicited result code 1 --- Enable network registration unsolicited result code +CREG: <code>&lt;stat&gt;</code> 2 --- Enable network registration unsolicited result code +CREG: <code>&lt;stat&gt;[,&lt;lac&gt;,&lt;ci&gt;]</code>
<code>&lt;stat&gt;</code>	0-5	0 --- Not registered, ME is not currently searching a new operator to register to 1 --- Registered, home network 2 --- Not registered, but ME is currently searching a new



		operator to register to 3 --- Registration denied 4 --- Unknown 5 --- Registered, roaming
<lac>		String type, two byte location area code in hexadecimal format
<ci>		String type, two byte cell ID in hexadecimal format

### Example

```
AT+CREG?
```

```
+CREG: 0,1
```

```
OK
```

## 10.3 AT+CGREG GPRS Network Registration Status

### Description

Set command controls the presentation of an unsolicited result code +CREG: <stat> when <n>=1 and there is a change in the MT network registration status, or code +CREG: <stat>[,<lac>,<ci>] when <n>=2 and there is a change of the network cell.

### Syntax

Command	Response
AT+CGREG=[<n>]	OK
AT+CGREG?	+CGREG: <n>,<stat> OK
AT+CGREG=?	+CGREG: (<n>list) OK

### Defined value

Parameter	values	Explain
<n>	0-2	0 --- Disable network registration unsolicited result code 1 --- Enable network registration unsolicited result code +CGREG: <stat> 2 --- Enable network registration unsolicited result code +CGREG:<stat>[,<lac>,<ci>]
<stat>	0-5	0 --- Not registered, ME is not currently searching a new operator to register to



		1 --- Registered, home network 2 --- Not registered, but ME is currently searching a new operator to register to 3 --- Registration denied 4 --- Unknown 5 --- Registered, roaming
<lac>		String type, two byte location area code in hexadecimal format
<ci>		String type, two byte cell ID in hexadecimal format

### Example

```
AT+CGREG?
```

```
+CGREG: 0,1
```

```
OK
```

## 10.4 AT^SYSINFO Query System Information

### Description

This command inquires the current system information. Such as system service status, domain, roaming, system mode, UIM card status, etc..

### Syntax

Command	Response
AT^SYSINFO	^SYSINFO:<srv_status>,<srv_domain>,<roam_status>,<sys_mode>,<sim_state>[,<reg_mode>]  OK

### Defined value

Parameter	values	Explain
<srv_status>	0-4	0 --- No service 1 --- Limited service 2 --- Service available 3 --- Limited regional service 4 --- Power save or deep sleep
<srv_domain>	0-4	0 --- No service 1 --- CS only capable 2 --- PS only capable



		3 --- CS and PS capable 4 --- Searching network
Searching network	0-1	0 --- Roaming off 1 --- Roaming on
<sys_mode>	0-10	0 --- No service 1 --- AMPS mode 2 --- CDMA mode 3 --- GSM mode 4 --- EVDO mode or TDS mode 5 --- WCDMA mode 6 --- GPS mode 7 --- GSM and WCDMA mode 8 --- CDMA Hybrid mode 9 --- LTE mode 10 --- GSM, WCDMA, and LTE mode
<sim_state>	0-1	0 --- SIM is not available 1 --- SIM is available
<reg_mode>	9	CDMA and LTE are online at the same time

**NOTE:**

The parameter <reg\_mode> is only applicable to the automatic mode of China telecom

**Example**

AT^SYSINFO

^SYSINFO: 2,3,0,9,1 //LTE mode

OK

AT^SYSINFO

^SYSINFO:2,3,0,2,1,9 //SRLTE mode

OK



## 10.5 AT^SYSCONFIG Set System Parameter

### Description

This command allows user to configure system parameter, access network mode, access network order, support roaming or not, service network domain.

### Syntax

Command	Response
AT^SYSCONFIG=<mode_pre f>,<acq_pref>,<roam_pref>,<domain_pref>	OK
AT^SYSCONFIG?	^SYSCONFIG:<mode_pref>,<acq_pref>,<roam_pref>,<domain_pref> OK

### Defined value

Parameter	values	Explain
<mode_pref>	2,13,14,15,16,19,38,39,51,54,60,61,65,99	Integer type, mode preferences: 2 --- Automatic 13 --- GSM only 14 --- WCDMA only 15 --- TD-SCDMA only 16 --- No change 19 --- GSM and WCDMA 38 --- LTE only 39 --- GSM, WCDMA or LTE 51 --- GSM and LTE 54 --- WCDMA and LTE 60 --- TD-SCDMA or GSM 61 --- TD-SCDMA, GSM or LTE 65 --- TD-SCDMA and LTE 99 --- Unknown
<acq_pref>	0-4	Integer type, indicate access network order 0 --- Automatic 1 --- GSM, WCDM 2 --- WDMA, GSM 3 --- No change



		4 --- Unknown
<roam_pref>	0-3	0 --- Forbid roam 1 --- Allow roam 2 --- No change 3 --- Unknown
<domain_pref>	0-4	0 --- CS only 1 --- PS only 2 --- CS and PS 3 --- Any 4 --- No Change 5 --- Unknown

### Example

```
AT^SYSCONFIG?
```

```
^SYSCONFIG: 2,2,0,2
```

```
OK
```

## 10.6 AT^MODECONFIG Network Mode Selection

### Description

The set command select system mode for MT ,don't need SIM card, and immediately available.

Read command returns the current system mode.

### Syntax

Command	Response
AT^MODECONFIG=<mode>	OK
AT^MODECONFIG?	^MODECONFIG:<mode> OK

### Defined value

Parameter	values	Explain
<mode>	2,9,10,13,14,1 5,19,22,38,39, 40,41,46,51,54 ,60,61,65,70	2 --- Automatic 9 --- CDMA 10 --- HDR only 13 --- GSM only



	14 --- WCDMA only 15 --- TD-SCDMA only 19 --- GSM and WCDMA 22 --- 1x+EVDO 38 --- LTE only 39 --- GSM, WCDMA or LTE 40 --- HDR+LTE 41 --- CDMA+HDR+LTE 46 --- CDMA+LTE 51 --- GSM and LTE 54 --- WCDMA and LTE 60 --- TD-SCDMA or GSM 61 --- TD-SCDMA, GSM or LTE 65 --- TD-SCDMA and LTE 70 --- WCDMA+TDSCDMA
--	--

**Example**

```

AT^MODECONFIG=2
OK
AT^MODECONFIG?
^MODEOCNFIG: 2
OK
    
```

## 10.7 AT^SYSORDER Configure Search Network Order

**Description**

The command configure search network order and it is affect after reboot.

**Syntax**

Command	Response
AT^SYSORDER=<sys_order>	OK or +CME ERROR: <err>
AT^SYSORDER?	^SYSORDER: <sys_order>
AT^SYSORDER=?	OK ^SYSORDER:sys_order>



	OK
--	----

**Defined value**

Parameter	values	Explain
<sys_order>	“123456” - “654321”	1 --- LTE ; 2 --- WCDMA ; 3 --- TD-SCDMA ; 4 --- GSM ; 5 --- EVDO ; 6 --- CDMA

**Example**

```

AT^SYSORDER="123456"

OK

AT^SYSORDER?

^SYSORDER:"123456"

OK

AT^SYSORDER=?

^SYSORDER:<sys order>

OK
    
```

## 10.8 AT+CEMODE EPS Registry Settings

**Description**

The set command used to set the MT corresponding to the EPS registration, the command affect after reboot.

Read command returns the current EPS registration mode.

**Syntax**

Command	Response
AT+CEMODE?	+CEMODE: <mode> OK
AT+CEMODE=?	+CEMODE: (<mode>list) OK



### Defined value

Parameter	values	Explain
<mode>	0-3	0 --- EPS attach only, UE is data centric 1 --- Combined attach, UE is voice centric 2 --- Combined attach, UE is data centric 3 --- EPS attach only, UE is voice centric

### Example

```
AT+CEMODE?
```

```
+CEMODE: 2
```

```
OK
```

```
AT+CEMODE=?
```

```
+CEMODE: (0-3)
```

```
OK
```

## 10.9 AT+CPOL Preferred Operator List

### Description

The command is used to edit the SIM preferred list of networks.

Execute command writes an entry. If <index> is given but <oper> is left out, entry is deleted. If <oper> is given but <index> is left out, <oper> is put in the next free location. If only <format> is given, the format of the <oper> in the read command is changed.

### Syntax

Command	Response
AT+CPOL=[<index>][,<format>][,<oper>]	OK
AT+CPOL?	+CPOL:<index>,<format>,<oper> [...] OK
AT+CPOL=?	+CPOL: (<index>list),(<format>list) OK



### Defined value

Parameter	values	Explain
<index>	1-8	Integer type, the order number of operator in the SIM preferred operator list.
<format>	0-2	0 --- Long format alphanumeric <oper> 1 --- Short format alphanumeric <oper> 2 --- Numeric <oper>
<oper>		String type; <format> indicates if the format is alphanumeric or numeric.

### Example

#### AT+CPOL?

```
+CPOL: 1,2,"46001",0,0,0,1
```

```
+CPOL: 2,2,"46009",0,0,0,1
```

```
+CPOL: 3,2,"46001",0,0,1,0
```

```
+CPOL: 4,2,"46009",0,0,1,0
```

```
OK
```

## 10.10 AT+QNWINFO Query Network Information

### Description

The command indicates the selected <act> of Access technology , the operator <oper> and the band <band>.

### Syntax

Command	Response
AT+QNWINFO	+QNWINFO:<act>,<oper>,<band>,<channel> OK
AT+QNWINFO=?	OK

### Defined value

Parameter	values	Explain
<act>	NO SERVICE	String type; Access technology selected
	GSM	
	GPRS	



	EDGE	
	CDMA	
	UMTS	
	HSDPA	
	HSUPA	
	HSPA	
	HSPA+	
	EVDO	
	TDSCDMA	
	FDD LTE	
	TDD LTE	
<oper>		
<band>	CDMA_BC0	String type; band selected
	GSM_85	
	GSM_EGSM_900	
	GSM_PGSM_900	
	GSM_RGSM_900	
	GSM_DCS_1800	
	GSM_PCS_1900	
	WCDMA_I_IMT_2000	
	WCDMA_III_1700	
	LTE_EUTRAN_BAND1	
	LTE_EUTRAN_BAND3	
	LTE_EUTRAN_BAND5	
	LTE_EUTRAN_BAND38	
	LTE_EUTRAN_BAND39	
	LTE_EUTRAN_BAND40	
	LTE_EUTRAN_BAND41	
	TDS_BANDA	
	TDS_BANDF	
<channel>		Integer type; channel id



### Example

```

AT+QNWINFO           //China Mobile LTE
+QNWINFO: "TDD LTE",46000,"LTE_EUTRAN_BAND40",38950

OK

AT+QNWINFO           //SRLTE
+QNWINFO: "CDMA",46003,"CDMA_BC0",201
           "FDD LTE",46011,"LTE_EUTRAN_BAND3",1825

OK

```

## 10.11 AT+PSRAT Current network information

### Description

This command is used to query the current registered network information.

### Syntax

Command	Response
AT+PSRAT	+ PSRAT: <psrat> OK Or +CME ERROR: <err>

### Defined value

Parameter	values	Explain
<psrat>	NO SERVICE	
	GSM	
	GPRS	
	EDGE	
	CDMA	
	UMTS	
	HSDPA	
	HSUPA	
	HSPA	
	HSPA+	
	EVDO	



	TDSCDMA	
	FDD LTE	
	TDD LTE	

**Example**

```
AT+PSRAT
```

```
+PSRAT: "TDD LTE"
```

```
OK
```

```
AT+PSRAT
```

```
//SRLTE
```

```
+PSRAT: "CDMA"
```

```
"FDD LTE"
```

```
OK
```

Shanghai YUGE



## Chapter 11. CDMA Dedicated AT Command

### 11.1 AT+QCIMI Request International Mobile Subscriber Identity

#### Description

Execution command requests the International Mobile Subscriber Identity (IMSI) which is intended to permit the TE to identify the individual SIM card or active application in the UICC (GSM or USIM) that is attached to MT.

#### Syntax

Command	Response
AT+QCIMI=?	OK
AT+QCIMI	<IMSI> OK

#### Defined value

Parameter	values	Explain
<IMSI>		International Mobile Subscriber Identity (string, without double quotes).

#### Example

```
AT+QCIMI
```

```
460037461613931
```

```
OK
```

### 11.2 AT^MEID Query MEID

#### Description

The command is used to query the module's MEID.

#### Syntax

Command	Response
AT^MEID=<MEID>	OK
AT^MEID=?	OK
AT^MEID	<MEID> OK

**Defined value**

Parameter	values	Explain
<MEID>		Mobile Equipment Identifier

**Example**

```
AT^MEID
```

```
0x0357941053826453
```

```
OK
```

```
AT^MEID=12345678901234E
```

```
OK
```

## 11.3 AT+CCSQ Signal Quality Report

**Description**

Execution command returns received signal strength indication <rss> and channel bit error rate <ber> from the ME. Test command returns values supported by the TA as compound values.

**Syntax**

Command	Response
AT+CCSQ	+CCSQ:<rss>,<ber> OK
AT+CCSQ=?	+CCSQ:(<rss>list),(<ber>list) OK

**Defined value**

Parameter	values	Explain
<rss> CDMA	0	- 113 dBm or less
	1	- 111 dBm
	2-30	- 109... - 53 dBm
	31	-51 dBm
	99	Not known or not detectable
<ber>	99	not known or not detectable

**Example**

```
AT+CCSQ
```

```
+CCSQ: 31, 99
```



OK

## 11.4 AT^HDRCSQ Signal Quality Under HDR Mode

### Description

This command is used to query the signal strength (RSSI) in the received HDR mode.

### Syntax

Command	Response
AT^HDRCSQ	^HDRCSQ: <hdr_rssi> OK
AT^HDRCSQ=?	^HDRCSQ: (<hdr_rssi>list) OK

### Defined value

Parameter	values	Explain
<hdr_rssi>	0,20,40,60,80,99	0 --- rssi >=125 20 --- rssi >=105 40 --- 90 <= rssi < 105 60 --- 75 <= rssi < 90 80 --- 60 <= rssi < 75 99 --- rssi <60

### Example

```
AT^HDRCSQ
^HDRCSQ: 80
```

OK



## Chapter 12. CDMA Dedicated Call Related AT Command

### 12.1 AT+CDV Dial Command

#### Description

The dial command can be used to set up outgoing voice and data calls.

#### Syntax

Command	Response
AT+CDV[digits][I/i][:]	OK

#### Defined values

Parameter	values	Explain
[digits]	0-9, *, #, +	Ready (ME allows commands from TA/TE)
[I/i]	I,i	I --- Activates CLIR i --- Deactivates CLIR
[:]		The termination character ":" is mandatory to set up voice calls.

#### Example

```
AT+CDV10086;
```

```
OK
```

```
^ORIG:2,0
```

```
^CONN:2,0
```

```
^LINKED:2,0
```

### 12.2 AT^CLIP Calling Line Identification Presentation

#### Description

The command refers to the GSM/UMTS supplementary service CLIP (Calling Line Identification Presentation) that enables a called subscriber to get the calling line identity (CLI) of the calling party when receiving a mobile terminated call.

Write command enables or disables the presentation of the CLI at the TE. It has no effect on the execution of the supplementary service CLIP in the network.



When the presentation of the CLI at the TE is enabled (and calling subscriber allows), +CLIP: <number>,<type> „,[<alpha>][,<CLI validity>]] response is returned after every RING (or +CRING: <type>; refer sub clause "Cellular result codes +CRC") result code sent from TA to TE. It is manufacturer specific if this response is used when normal voice call is answered.

### Syntax

Command	Response
AT^CLIP=?	^CLIP : (<n>list) OK
AT^CLIP?	^CLIP : <n>,<m> OK
AT^CLIP=<n>	OK
	+CLIP:<number>,<type> „,[<alpha>][,<CLI validity>]]

### Defined value

Parameter	values	Explain
<n>	0	Disable
	1	Enable
<m>	0	CLIP not provisioned
	1	CLIP provisioned
	2	Unknown (e.g. no network, etc.)
<number>		String type phone number of calling address in format specified by <type>.
<type>	128	Restricted number type includes unknown type and format
	145	International number type
	161	National number.The network support for this type is optional
	177	Network specific number,ISDN format
	129	Otherwise

### Example

```
AT^CLIP=1
OK
```



## 12.3 ^LINKED Call Answering Indication

### Description

When the call is switched on, the MT reports to the TE to indicate that the current state has changed to a call state.

### Syntax

Command	Response
	^LINKED:<call_id>,<call_type>

### Defined value

Parameter	values	Explain
<call_id>		Integer type, call identification number, this number can be used in +CHLD command operations.
<call_type>	0,9	0 --- Voice call 9 --- Emergency call

### Example

```
AT+CDV10086;
OK

^ORIG:2,0

^CONN:2,0

^LINKED:2,0
```

## 12.4 AT^CDTMF Dual Tone Multi-Frequency

### Description

Call state, by signaling to send DTMF value to the network side.

### Syntax

Command	Response
AT^CDTMF=<number>[,<on_length>[,<off_length>] ]	OK or +CME ERROR:<err>

### Defined values

Parameter	values	Explain
<number>	0-9,*,#,A,B,C,D	DTMF value



<on_length>	0	Press
	1	Lift
	95,150,200,250,300,350	DTMF tone duration, in ms
<off_length>	hold	Interval time of DTMF tone

**Example**

```

ATD02150177336; //Dialled the operator.
OK

^ORIG:2,0

^CONN:2,0

^LINKED:2,0

AT^CDTMF=8 //Dial 8006 extension
OK
AT^CDTMF=0
OK
AT^CDTMF=0
OK
AT^CDTMF=6
OK
AT+CHV
OK

^CEND:4,13,29
    
```

## 12.5 +CCWA Call Waiting

**Description**

Telecom call waiting for default open, don't need to set.

**syntax**

Command	Response
	+CCWA:<status>,<class1>[<CR><LF> +CCWA:<status>,<class2>[...]]

**Defined value**

Parameter	values	Explain
<status>	0-1	0 --- Disable 1 --- Enable
<class>	1,2,4,8,16, 32,64,128, 255	1 --- voice (telephony) 2 --- data (refers to all bearer services) 4 --- fax (facsimile services) 8 --- Short message 16 --- data circuit sync 32 --- data circuit async 64 --- dedicated packet access 128 --- dedicated PAD access 255 --- The value 255 covers all classes

**12.6 AT+QCHLD Call Related Supplementary Services****Description**

The command allows the control of the following call related services:

1. A call can be temporarily disconnected from the ME but the connection is retained by the network.
2. Multiparty conversation (conference calls).
3. The served subscriber who has two calls (one held and the other either active or alerting) Can connect the other parties and release the served subscriber's own connection. Calls can be put on hold, recovered, released, added to conversation, and transferred.

**Syntax**

Command	Response
AT+QCHLD	OK Or ERROR/+CME ERROR:<err>



## Chapter 13. CDMA dedicated Packet Domain Commands

### 13.1 ATD#777 Initiate Data Connection

#### Description

This command will enable the MT to initiate a series of necessary operations to establish a communication with PDN.

#### Syntax

Command	Response
ATD#777[*[<called_address>][* [<L2P>][*[<cid>]]]]#	CONNECT 150000000

#### Defined value

Parameter	values	Explain
<called_address>		Ignore
<L2P>	“PPP”	
<cid>	1-24,100-179	A numeric parameter which specifies a particular PDP context definition

#### Example

```
ATD#777
CONNECT 3100000
```

### 13.2 AT^GPSWORD Set User Name and Password

#### Description

Set the user name and password for the module. Using the command AT+CRM=1, external check user name and password. Using the command AT+CRM=2, internal check user name and password.

#### Syntax

Command	Response
AT^GPSWORD=<userid>, <password>	OK ERROR +CME ERROR: <err>
AT^GPSWORD?	^GPSWORD: USERID, PASS
AT^GPSWORD=?	OK ^GPSWORD:<"USERID", "PASS">



OK
----

**Defined value**

Parameter	values	Explain
<userid>		User name
<password>		Password

**Example**

```
AT^GPSWORD=ctwap@mycdma.cn,vnet.mobi
```

```
OK
```

Shanghai YUGE



## Chapter 14. GPS

### 14.1 AT+CGPSPORT Set GPS information output port

#### Description

The command is used to set GPS information output port.

#### Syntax

Command	Response
AT+CGPSPORT=<port>	OK

#### Defined value

Parameter	values	Explain
<port>	1-2	1 --- AT port 2 --- MODEM port

#### Example

```
AT+CGPSPORT=1
```

```
OK
```

### 14.2 AT+CGPS Start or stop GPS

#### Description

The command is used to start or stop GPS server.

#### Syntax

Command	Response
AT+CGPS=<mode>	OK

#### Defined value

Parameter	values	Explain
<mode>	0-1	0 --- stop 1 --- start

#### Example

```
AT+CGPS=1
```

```
OK
```

```
$GPVTG,,T,,M,,N,,K,N*2C
```

```
$GPGSA,A,1,,,,,,,,,,,,,*1E
```

```
$GPGGA,,,,,0,,,,,*66
```

```
$GPRMC,,V,,,,,,,,,N*53
```



```
.....
$GPVTG,,T,0.0,M,0.0,N,0.0,K,A*0D
$GPRMC,024212.0,A,3111.226722,N,12134.961633,E,0.0,,020315,0.0,E,A*27
$GPGSA,A,2,05,12,24,,,,,,,,,2.5,2.3,0.9*3C
$GPGSV,2,1,06,05,16,112,37,12,04,153,38,24,70,164,41,,,,,36*41
$GPGSV,2,2,06,42,,,35,28,,,*75
$GPGGA,024213.0,3111.227976,N,12134.961846,E,1,03,2.3,17.0,M,10.0,M,,*63
.....
```

### 14.3 AT+CGPSHIDE Open or Close the GPS information report

#### Description

The command is used to open or close the GPS information report . If you set the command to “0”, the GPS information will reporting from the USB port .If you set the command to “1”,the GPS information will not be reported.

#### Syntax

Command	Response
AT+CGPSHIDE=<switch>	OK
AT+CGPSHIDE?	+CGPSHIDE: <switch> OK
AT+CGPSHIDE=?	+CGPSHIDE: (0-1) OK

#### Defined value

Parameter	values	Explain
<switch>	0-1	0 --- open (Default) 1 --- close

#### Example

```
AT+CGPS=1
OK
$GPVTG,,T,,M,,N,,K,,N*2C
$GPGSA,A,1,,,,,,,,,,,,,*1E
$GPGGA,,,,,0,,,,,,,,,*66
AT+CGPSHIDE=1
OK
```



```
AT+CGPSHIDE=0
```

```
OK
```

```
$GPVTG,,T,,M,,N,,K,N*2C
```

```
$GPGSA,A,1,,,,,,,,,,,,,*1E
```

## 14.4 AT+CGPSINFO Get GPS information

### Description

This command is used to get the GPS location information.

### Syntax

Command	Response
AT+CGPSINFO	+CGPSINFO:[<lat>] , [<N/S>] , [<lon>] , [<E/W>] , [<date>] , [<UTC time>],[<alt>] , [<speed>],[<course>]  OK
AT+CGPSINFO=<Time>	OK or +CME ERROR: <err>
AT+CGPSINFO?	+CGPSINFO: <Time>  OK
AT+CGPSINFO=?	+CGPSINFO: (0-255)  OK

### Defined value

Parameter	values	Explain
<Time>	0-255	<time> is cycle of the GPS information reported, set <time> to "0" will cancel reported.
<lat>		Latitude ,format as ddmm.mmmm
<N/S>		North or South
<lon>		Longitude, format as dddmm.mmmm
<E/W>		East or West
<date>		Date, format as ddmmyy
<UTC time>		Time, format as hhmmss.s
<alt>		Altitude, the unit is meter
<speed>		Ground speed, unit is sea miles per hour
<course>		course

**Example**

```
AT+CGPSINFO
```

```
+CGPSINFO:3111.227310,N,12134.963493,E,020315,024422.0,26.4,0.0,164.9
```

```
OK
```

```
AT+CGPSINFO=3
```

```
OK
```

```
+CGPSINFO:3111.227310,N,12134.963493,E,020315,024422.0,26.4,0.0,164.9
```

```
+CGPSINFO:3111.227310,N,12134.963493,E,020315,024422.0,26.4,0.0,164.9
```

```
+CGPSINFO:3111.227310,N,12134.963493,E,020315,024422.0,26.4,0.0,164.9
```

```
+CGPSINFO:3111.227310,N,12134.963493,E,020315,024422.0,26.4,0.0,164.9
```

**14.5 NMEA message specification****14.5.1 GPGGA GPS Fixed Data**

Data format:

```
$GPGGA,<1>,<2>,<3>,<4>,<5>,<6>,<7>,<8>,<9>,M,<10>,M,<11>,<12>*xx<CR><LF>
```

Data	Description
\$GPGGA	Message ID
<1>	UTC time , format as hhmmss.sss
<2>	Latitude ,format as ddmm.mmmm
<3>	N/S indicator, N-north ,S-south
<4>	Longitude , format as dddmm.mmmm
<5>	E/W indicator , E-east,W-west
<6>	GPS Status 0 --- invalid 1 --- valid
<7>	Satellites used
<8>	Horizontal dilution of precision
<9>	MSL altitude, Unit is meters
M	Unit of <9>,meters
<10>	Geoid separation, Unit is meters
M	Unit of <10>,meters
<11>	Age of Diff. Corr , null fields when DGPS is not used
<12>	Diff.Ref.Station ID
*xx	checksum
<CR><LF>	End of message termination



**Example**

\$GPGGA,061358.0,3111.219395,N,12134.967684,E,1,04,2.0,15.6,M,10.0,M,,\*60

name	Data	Description	Note
Message ID	\$GPGGA		
UTC time	061358.0	14:13:58.0	UTC+8h
Latitude	3111.219395	31°11'13"	0.219395×60=13.1637≈13"
N/S Indicator	N	North Latitude	
Longitude	12134.967684	121°34'58"	0.967684×60=58.06104≈58"
E/W Indicator	E	East Longitude	
GPS Status	1	Valid	
Satellites used	04	Using 4 Satellites	
HDOP	2.0	Horizontal dilution of precision	
MSL altitude	15.6	15.6m	
M	M	Meters	
Geoid separation	10.0	10.0m	
M	M	Meters	
Age of Diff. Corr	null		
Diff.Ref.Station ID	null		
checksum	*60		

**14.5.2 GPGSA GNSS DOP and Active Satellites**

Data format:

\$GPGSA,<1>,<2>,<3>,<4>,<5>,<6>,<7>,<8>,<9>,<10>,<11>,<12>,<13>,<14>,<15>,<16>,<17>\*<18><CR><LF>

Data	Description
\$GPGSA	Message ID
<1>	Mode 1 M --- Manual , forced to operate in 2D or 3D mode A --- Allowed to automatically switch 2D/3D
<2>	Mode 2 1 --- fix not available 2 --- 2D 3 --- 3D



<3>	Satellite used , SV on channel 1
<4>	Satellite used , SV on channel 2
<5>	Satellite used , SV on channel 3
<6>	Satellite used , SV on channel 4
<7>	Satellite used , SV on channel 5
<8>	Satellite used , SV on channel 6
<9>	Satellite used , SV on channel 7
<10>	Satellite used , SV on channel 8
<11>	Satellite used , SV on channel 9
<12>	Satellite used , SV on channel 10
<13>	Satellite used , SV on channel 11
<14>	Satellite used , SV on channel 12
<15>	PDOP (0.5 - 99.9)
<16>	HDOP (0.5 - 99.9)
<17>	VDOP (0.5 - 99.9)
<18>	checksum
<CR><LF>	End of message termination

### Example

```
$GPGSA,A,3,07,02,26,27,09,04,15,,,,,1.8,1.0,1.5*33
```

name	Data	Description	Note
Message ID	\$GPGSA		
Mode 1	A	Allowed to automatically switch 2D/3D	
Mode 2	3	3D	
Satellite used	07	SV on channel 1	
Satellite used	02	SV on channel 2	
...	...	...	
Satellite used		SV on channel 12	
PDOP	1.8	Position Dilution of Precision	
HDOP	1.0	Horizontal Dilution of Precision	
VDOP	1.5	Vertical Dilution of Precision	
checksum	*33	End of message termination	





## 14.5.4 GPRMC Recommended Minimum Specific GNSS Data

Data format:

\$GPRMC,<1>,<2>,<3>,<4>,<5>,<6>,<7>,<8>,<9>,<10>,<11>,<12>\*<13><CR><LF>

Data	Description
\$GPRMC	Message ID
<1>	UTC time
<2>	Mode M --- Manual , forced to operate in 2D or 3D mode A --- Allowed to automatically switch 2D/3D
<3>	Latitude ,format as ddmm.mmmm
<4>	N/S indicator, N-north ,S-south
<5>	Longitude , format as dddmm.mmmm
<6>	E/W indicator , E-east,W-west
<7>	Speed over ground
<8>	Course over ground
<9>	Date , format as ddmmyy
<10>	Magnetic variation
<11>	East/West indicator E-east or W-west
<12>	Mode A --- Autonomous D --- DGPS
<13>	checksum
<CR><LF>	End of message termination

### Example

\$GPRMC,061406.0,A,3111.219903,N,12134.967443,E,0.0,,250615,0.0,E,A\*27

name	Data	Description	Note
Message ID	\$GPGSA		
UTC time	061406.0	14:14:06.0	UTC+8h
Mode	A	Allowed to automatically switch 2D/3D	
Latitude	3111.219903	31°11'13"	$0.219903 \times 60 \approx 13''$
N/S indicator	N	N-north	
Longitude	12134.967443	121°34'58"	$0.967443 \times 60 \approx 58''$
E/W indicator	E	E-east	
Speed over ground	0.0		



Course over ground			
Date	250615	2015.06.25	
Magnetic variation	0.0		
East/West indicator	E	E-east	
Mode	A	A --- Autonomous	
checksum	*27		

### 14.5.5 GPVTG Course Over Ground and Ground Speed

Data format:

\$GPVTG,<1>,T,<2>,M,<3>,N,<4>,K,<5>\*<6><CR><LF>

Data	Description
\$GPVTG	Message ID
<1>	Course ,measured heading
T	Reference , true
<2>	Course , measured heading
M	Reference ,Magneticl
<3>	Speed ,measured horizontal speed
N	units
<4>	Speed km/hr measured horizontal speed
K	Units , Kilometers per hour
<5>	Mode A --- Autonomous D --- DGPS
*<6>	checksum
<CR><LF>	End of message termination

#### Example

\$GPVTG,,T,0.0,M,0.0,N,0.0,K,A\*0D

name	Data	Description	Note
Message ID	\$GPVTG		
Course			
Reference	T	Reference , true	
Course	0.0	measured heading	
Reference	M	Magneticl	



Speed	0.0	measured horizontal speed	
Units	K	Kilometers per hour	
Mode	A	Autonomous	
checksum	*0D		

Shanghai YUGE



## Chapter 15. CDMA dedicated short message related commands

### 15.1 AT\$QCPMS(AT+CPMS) Preferred message storage

#### Description

The command is used to select memory storages <mem1>, <mem2> and <mem3> to be used for reading, writing, etc.

#### Syntax

Command	Response
AT\$QCPMS=<mem1>[,<mem2>[,<mem3>]]	\$QCPMS:<used1>,<total1>,<used2>,<total2>,<used3>,<total3> OK
AT\$QCPMS?	\$QCPMS:<mem1>,<used1>,<total1>,<mem2>,<used2>,<total2>,<mem3>,<used3>,<total3> OK
AT\$QCPMS=?	\$QCPMS:(<mem1>list),(<mem2>list),(<mem3>list) OK

#### Defined values

Parameter	values	Explain
<mem1>	“SM”	SIM message storage,memory from which messages are read and deleted
	“ME”or“MT”	FLASH message storage,memory from which messages are read and deleted
<mem2>	“SM”	SIM message storage,memory to which writing and sending operations are made
	“ME”or“MT”	FLASH message storage,memory to which writing and sending operations are made
<mem3>	“SM”	SIM message storage,memory to which received SMS is preferred to be stored
	“ME”or“MT”	FLASH message storage,memory to which received SMS is preferred to be stored
<usedx>		number of messages currently in <memX>.
<totalx>		total number of message locations in <memX>.



### Example

```
AT$QCPMS?
```

```
$QCPMS: "ME",0,99,"ME",0,99,"ME",0,99
```

```
OK
```

```
AT$QCPMS="SM","SM","SM"
```

```
$QCPMS: 2,40,2,40,2,40
```

```
OK
```

```
AT$QCPMS=?
```

```
$QCPMS: ("ME","MT","SM"),("ME","MT","SM"),("ME","MT","SM")
```

```
OK
```

## 15.2 AT\$QCMGF(AT+CMGF) Select Short Message Format

### Description

The command is used to specify the input and output format of the short messages.

### Syntax

Command	Response
AT\$QCMGF[=<mode>]	OK
AT\$QCMGF?	\$QCMGF: <mode> OK
AT\$QCMGF=?	\$QCMGF: (<mode>list) OK

### Defined values

Parameter	values	Explain
<mode>	0	PDU mode
	1	Text mode

## 15.3 AT\$QCNMI(AT+CNMI) New Message Indications to TE

### Description

The command is used to select the procedure how receiving of new messages from the network is indicated to the TE when TE is active, e.g. DTR signal is ON.



## Syntax

Command	Response
AT\$QCNMI=[<mode>[,<mt>[,<bm>[,<ds>[,<bfr>]]]]]	OK
AT\$QCNMI?	\$QCNMI:<mode>,<mt>,<bm>, OK
AT\$QCNMI=?	\$QCNMI:(<mode>list),(<mt>list),(<bm>list), OK

## Defined values

Parameter	values	Explain
<mode>	0	Buffer unsolicited result codes in the TA. If TA result code buffer is full, indications can be buffered in some other place or the oldest indications may be discarded and replaced with the new received indications.
	1	Discard indication and reject new received message unsolicited result codes when TA-TE link is reserved (e.g. in on-line data mode). Otherwise forward them directly to the TE.
	2	Buffer unsolicited result codes in the TA when TA-TE link is reserved (e.g. in on-line data mode) and flush them to the TE after reservation. Otherwise forward them directly to the TE
<mt>	0	No SMS-DELIVER indications are routed to the TE.
	1	If SMS-DELIVER is stored into ME/TA, indication of the memory location is routed to the TE using unsolicited result code: \$QCNMI: <mem3>,<index>.
	2	SMS-DELIVERs (except class 2 messages and messages in the message waiting indication group (store message)) are routed directly to the TE using unsolicited result code: \$QCNMI:[<alpha>],<length><CR><LF><pdu> (PDU mode enabled); or \$QCNMI:<oa>,[<alpha>],<scts>[,<tooa>,<fo>,<pid>,<dcs>,<sca>,<tosca>,<length>]



		<CR> <LF><data>
	3	Class 3 SMS-DELIVERs are routed directly to TE using unsolicited result codes defined in <mt>=2. Messages of other data coding schemes result in indication as defined in <mt>=1.
<bm>	0	No CBM indications are routed to the TE.
	1	New CBMs are routed directly to the TE using unsolicited result code: +CBM: <length><CR><LF><pdu> (PDU mode enabled); or +CBM: <sn>,<mid>,<dcs>,<page>,<pages><CR><LF><data> (text mode enabled)

**Example**

AT\$QCNMI=1,2

OK

\$QCMT: "REC UNREAD","138XXXXXXXXX","16/01/26,14:17:37+00",7  
5555555

### 15.4 AT\$QCMGW(AT+CMGW) Write Message to Memory

**Description**

AT\$QCMGW write and execution commands store a short message from TE to memory storage <mem2>. Memory location <index> of the stored message is returned.

**Syntax**

Command	Response
AT\$QCMGW=<da>[,<toda>[,<stat>]] text to send <ctrl-Z/ESC> (TEXT mode)	\$QCMGW: <index>  OK
AT\$QCMGW=<length>[,<stat>] PDU to send <ctrl-Z/ESC> (PDU mode)	\$QCMGW: <index>  OK
AT\$QCMGW=?	OK



## Defined values

Parameter	values	Explain	
<da>		Destination-Address.	
<toda>		TP-Destination-Address, Type-of-Address octet in integer format. (when first character of <da> is +(IRA 43) default is 145, otherwise default is 129).	
<stat>	text	“REC UNREAD”	Received unread messages
		“REC READ”	Received read messages
		“STO UNSENT”	Stored unsent messages
		“STO SENT”	Stored sent messages
		“ALL”	All messages
	PDU	0	Received unread messages
		1	Received read messages
		2	Stored unsent messages
		3	Stored sent messages
		4	All messages

## Example

```

AT$QCMGW="138XXXXXXXXX"
> 666666

$QCMGW: 2

OK
AT$QCMSS=2
$QCMSS: 674

OK

```

## 15.5 AT\$QCMSS(AT+CMSS) Send Message From Storage

### Description

The command is used to send message with location value <index> from preferred message storage <mem2> to the network (SMS-SUBMIT or SMS-COMMAND).



## Syntax

Command	Response	
AT\$QCMSS=<index>[,<da>[,<toda>]]	text	\$QCMSS:<mr>[,<scts>] OK
	PUD	\$QCMSS:<mr>[,<ackpdu>] OK

## Defined values

Parameter	values	Explain
<index>		Value in the range of location numbers supported by the associated memory and start with zero.
<da>		Destination-Address, Address-Value field in string format; BCD numbers (or GSM 7 bit default alphabet characters) are converted to characters of the currently selected TE character set, type of address given by <toda>.
<toda>		Type of recipient address.
<mr>		Message reference.
<scts>		Service center time stamp.
<ackpdu>		Format is same for <pdu> in case of SMS, but without 3GPP TS 24.011 SC address field and parameter shall be bounded by double quote characters like a normal string type parameter.

## Example

```
AT$QCMGW="138XXXXXXXXX"
> 666666

$QCMGW: 2

OK
AT$QCMSS=2
$QCMSS: 674

OK
```



## 15.6 AT\$QCMGS(AT+CMGS) Send Message

### Description

AT\$QCMGS write command sends a short message from TE to network (SMS- After invoking the write command, wait for the prompt “>” and then start to write the message. Then enter <CTRL-Z> to indicate the ending of PDU and begin to send the message. Sending can be cancelled by giving <ESC> character. Abortion is acknowledged with “OK”, though the message will not be sent. The message reference <mr> is returned to the TE on successful message delivery. The value can be used to identify message upon unsolicited delivery status report result code.

### Syntax

Command	Response
AT\$QCMGS=<da>[,<toda>] text to send <ctrl-Z/ESC> (TEXT mode)	\$QCMGS: <mr>  OK
AT\$QCMGS=<length> PDU to send <ctrl-Z/ESC> (PDU mode)	\$QCMGS: <mr>  OK

### Defined values

Parameter	values	Explain
<da>		Destination-Address, Address-Value field in string format; BCD numbers (or GSM 7 bit default alphabet characters) are converted to characters of the currently selected TE character set, type of address given by <toda>.
<toda>		TP-Destination-Address, Type-of-Address octet in integer format. (when first character of <da> is +(IRA 43) default is 145, otherwise default is 129).
<length>		Message length.
<mr>		Message reference.

### Example

```
AT$QCMGS="138XXXXXXXXX"
```

```
> 8888888888888888
```

```
$QCMGS: 675
```

```
OK
```



## 15.7 AT\$QCMGL(AT+CMGL) List Messages

### Description

This command write command returns messages with status value <stat> from preferred message storage <mem1> to the TE. If the status of the message is “REC UNREAD”, the status in the storage changes to “REC READ” . When executing command AT\$QCMGL without status value <stat>, it will report the list of SMS with “REC UNREAD” status.

### Syntax

Command		Response
AT\$QCMGL[=<stat>]	PDU	\$QCMGL:<index>,<stat>,[<alpha>],<length><CR><LF><PDU> OK
	text	\$QCMGL:<index>,<stat>,<da>/<oa>,[<alpha>],[<scts>][<tooa>/<toda>,<length>]<CR><LF><data>[...] OK
AT\$QCMGL=?		\$QCMGL: (<stat>list) OK

### Defined values

Parameter	values	Explain	
<index>		Value in the range of location numbers supported by the associated memory and start with zero.	
<stat>	text	“REC UNREAD”	Received unread messages
		“REC READ”	Received read messages
		“STO UNSENT”	Stored unsent messages
		“STO SENT”	Stored sent messages
		“ALL”	All messages
	PDU	0	Received unread messages
		1	Received read messages
		2	Stored unsent messages
		3	Stored sent messages
		4	All messages



<alpha>		String type alphanumeric representation of <da> or <oa> corresponding to the entry found in MT phonebook; implementation of this feature is manufacturer specific; used character set should be the one selected with command Select TE Character Set <a href="#">AT+CSCS</a> .
<length>		Message length.
<da>		Destination-Address, Address-Value field in string format; BCD numbers (or GSM 7 bit default alphabet characters) are converted to characters of the currently selected TE character set, type of address given by <toa>.
<oa>		Originating-Address, Address-Value field in string format; BCD numbers (or GSM 7 bit default alphabet characters) are converted to characters of the currently selected TE character set, type of address given by <tooa>.
<scts>		Service center time stamp.
<tooa>		Type of originating address.
<toda>		Type of recipient address.

### Example

```

AT$QCMGF=1
OK
AT$QCMGL="ALL"
$QCMGL: 0,"REC UNREAD","13122762593","16/01/21,14:14:02+00",,129,5
edeee
$QCMGL: 1,"REC UNREAD","13122762593","16/01/21,14:14:44+00",,129,7
hhhhhhh
$QCMGL: 2,"STO SENT","138XXXXXXXXX","00/00/00,00:00:00+00",,129,6
666666

```



OK

## 15.8 AT\$QCMGR(AT+CMGR) Read Message

### Description

The command returns message with location value <index> from message storage <mem1> to the TE.

### Syntax

Command		Response
AT\$QCMGR=<index>	text	\$QCMGR:<stat>,<number>,[<reserved>],<time> <data>  OK
	PDU	\$QCMGR:<stat>,[<alpha>],<length> <pdu>  OK
AT\$QCMGR=?		OK

### Defined value

Parameter	values	Explain	
<index>		Value in the range of location numbers supported by the associated memory and start with zero.	
<stat>	text	“REC UNREAD”	Received unread messages
		“REC READ”	Received read messages
		“STO UNSENT”	Stored unsent messages
		“STO SENT”	Stored sent messages
		“ALL”	All messages
	PDU	0	Received unread messages
		1	Received read messages
		2	Stored unsent messages
		3	Stored sent messages
		4	All messages
<number>		Sender number	
<reserved>		Null	
<time>		TP-Discharge-Time in time-string	



		format : "yy/MM/dd , hh:mm:ss+zz", where characters indicate year (two last digits), month, day, hour, minutes, seconds and time zone.
<alpha>		String type alphanumeric representation of <da> or <oa> corresponding to the entry found in MT phonebook; implementation of this feature is manufacturer specific; used character set should be the one selected with command Select TE Character Set AT+CSCS.
<length>		Message length.

**Example**

```
$QCMTI: "SM",3 //Receive a text message
AT$QCMGR=3
$QCMGR: "REC UNREAD","138XXXXXXXXX","16/01/26,14:22:46+32"
222222222
OK
```

## 15.9 AT\$QCMGD(AT+CMGD) Delete Message

**Description**

The command is used to delete message from preferred message storage <mem1> location <index>.

**Syntax**

Command	Response
AT+CMGD=<index>[,<delflag>]	OK
AT+CMGD=?	OK

**Defined value**

Parameter	values	Explain
<index>	0-255	Value in the range of location numbers supported by the associated memory and start with zero.
<delflag>	0	Delete the message specified in <index>.(or omitted)
	1	Delete all read messages from preferred message storage.
	2	Delete all read messages from preferred message storage



		and sent mobile originated messages.
	3	Delete all read messages from preferred message storage, sent and unsend mobile originated messages
	4	Delete all messages from preferred message storage including unread messages.

Shanghai YUGE